



DAIKIN ROOM AIR CONDITIONER

INSTALLATION MANUAL

R410A Split Series



MODELS

FTXG20LV1BW FTXG20LV1BS

FTXG25LV1BW FTXG25LV1BS

FTXG35LV1BW FTXG35LV1BS

FTXG50LV1BW FTXG50LV1BS

CE - DECLARATION-OF-CONFORMITY CE - KONFORMITÄTSERKLÄRUNG CE - DECLARATION-DE-CONFORMITE CE - CONFORMITEITSVERKLARING

CE - DECLARACION-DE-CONFORMIDAD CE - DICHIARAZIONE-DI-CONFORMITA CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE CE - 3AABAIEHIVE-O-COOTBETCTBUN CE - OVERENSSTEMMEL SESERKLÆRING CE - FÖRSÄKRAN-OM-ÖVERENSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR CE - ILMOITUS-YHDENMUKAISUUDESTA CE - PROHLÅŠENÍ-O-SHODĚ

CE - IZJAVA-O-USKLAĐENOSTI CE - MEGFELELŐSÉGI-NYILATKOZAT CE - DEKLARACJA-ZGODNOŚCI CE - DECLARAŢIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI CE - VASTAVUSDEKLARATSIOON CE - ДЕКЛАРАЦИЯ-3A-CЪOTBETCTBИE

CE - ATTIKTIES-DEKLARACIJA CE - ATBILSTĪBAS-DEKLARĀCIJA CE - VYHLÁSENIE-ZHODY CE - UYGUNLUK-BEYANI

Daikin Industries Czech Republic s.r.o.

01 (GB) declares under its sole responsibility that the air conditioning models to which this declaration relates:

02 (D) erklärt auf seine alleinige Verantwortung daß die Modelle der Klimageräte für die diese Erklärung bestimmt ist:

03 (F) déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:

04 (NL) verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft. 05 (E) declara baja su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:

06 () dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:

07 🕞 δηλώνει με αποκλειστική της ευθύνη ότι τα μοντέλα των κλιματιστικών συσκευών στα οποία αναφέρεται η παρούσα δήλωση:

08 (P) declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

69 ещэ заявляет, исличительно под свою ответственность, что модели пондиционеров воздуха, к которым относится нестоящее заявление: 10 ето еткаете under eneansiar, at kimaanlægmodellerne, som denne dektaration vedrarer:

11 (S) deklarerar i egenskap av huvudansvarig, att luftkonditioneringsmodellerna som berörs av denna deklaration innebär att: 12 (N) erklærer et fullstendig ansvar for at de luftkondisjoneringsmodeller som berøres av denne deklarasjon, innebærer at:

14 (② prohlažuje ve svie piné odpovědnosti, že modely klimatizaca, k nimž se toto prohlášení vzlahuje: 15 (④) izjavluje pod isključivo vkastlom odgovomnoštu, da su modeli klima uredaja na koje se ova izjava odnosi: 16 (④) teljes felelossége tudatában klipienti, hogy a klimaberendezés modellek, melyekre e nyřatkozat vonatkozik: 13 (Fix) ilmoittaa yksinomaan omalla vastuullaan, että tämän ilmoituksen tarkoittamat ilmastointilaitteiden mallit:

17 (PL) deklaruje na własną i wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:

18 (RO) declară pe proprie răspundere că aparatele de aer condiționat la care se referă această declarație: 19 (st.) z vso odgovornostjo izjavlja, da so modeli klimatskih naprav, na katere se izjava nanaša:

20 (637) kinnitab oma täielikul vastutusel, et käesoleva deklaratsiooni alla kuuluvad kliimaseadmete mudelid:

21 (вс) декларира на своя отговорност, че моделите климатична инсталация, за които се отнася тази декларация; 22 (II) visiška savo atsakomybe skelbia, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma ši deklaracija:

23 (LV) ar pilnu atbildību apliecina, ka tālāk uzskaitīto modeļu gaisa kondicionētāji, uz kuriem attiecas šī deklarācija:

24 (®N. vyhlasuje na viastnú zodpovednosť, že tielo klimatizaché modely, na ktoré sa vztahuje toto vyhlásenie:
25 (®) tamarnen kendí sorumlutúgunda olmak tizere bu bildírinin ligli oldugu klima modellerinin aşagirdakí gibí oldugunu beyan edler:

FTXG20LV1BW, FTXG25LV1BW, FTXG35LV1BW, FTXG50LV1BW, FTXG20LV1BS, FTXG25LV1BS, FTXG35LV1BS, FTXG50LV1BS,

I are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our

02 der/den folgenden Norm(en) oder einem anderen Normdokument oder -dokumenten entspricht/entspreichen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:

04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig 03 sont conformes à la/aux norme(s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions: onze instructies: 05 están en conformidad con la(s) siguiente(s) norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nestras instrucciones:

06 sono conformi al(i) seguente(i) standard(s) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle

07 είναι σύμφωνα με το(α) ακόλουθο(α) πρότυπο(α) ή άλλο έγγραφο(α) κανονισμών, υπό την προϋπόθεση ότι χρησιμοποιούνται σύμφωνα με τις οδηγίες μας:

08 estão em conformidade com a(s) seguinte(s) norma(s) ou outro(s) documento(s) normativo(s), desde que estes sejam utilizados de 09 соответствуют следующим стандартам или другим нормативным документам, при условии их ислользования согласно нашим acordo com as nossas instruções:

10 overholder følgende standard(er) eller andet/andre retningsgivende dokument(er), forudsat at disse anvendes i henhold til vore instrukser:

11 respektive utrustning är utförd i överensstämmelse med och följer följande standard(er) eller andra normgivande dokument, under 12 respektive utstyr er i overensstemmelse med følgende standard(er) eller andre normgivende dokument(er), under forutssetning av at förutsättning att användning sker i överensstämmelse med våra instruktioner:

13 vastaavat seuraavien standardien ja muiden ohjeellisten dokumenttien vaatimuksia edellyttäen, että niitä käytetään ohjeidemme disse brukes i henhold til våre instrukser:

15 u skladu sa slijedećim standardom(ima) ili drugim normativnim dokumentom(ima), uz uvjet da se oni koriste u skladu s našim uputama: 14 za předpokladu, že jsou využívány v souladu s našími pokyny, odpovídají následujícím normám nebo normativním dokumentům:

17 spelniają wymogi następujących nom i innych dokumentów normalizacyjnych, pod warunkiem że używane są zgodnie z naszymi 16 megfelelnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használják: instrukcjami 18 sunt în conformitate cu următorul (următoarele) standard(e) sau alt(e) document(e) normativ(e), cu condiția ca acestea să fie utilizate în

conformitate cu instrucțiunile noastre:

20 on vastavuses järgmis(!)e standardi(te)ga või teiste normatiivsete dokumentidega, kui neid kasutatakse vastavalt meie juhenditele: 21 съответстват на следните стандарти или други нормативни документи, при условие, че се използват съгласно 1 19 skladni z naslednjimi standardi in drugimi normativi, pod pogojem, da se uporabljajo v skladu z našimi navodili:

22 atitinka žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus: 23 tad, ja lietoti atbilstoši ražotāja norādījumiem, atbilst sekojošiem standartiem un citiem normatīviem dokumentiem: инструкции

24 sú v zhode s nasledovnou(ými) nomou(ami) alebo iným(i) nomatívnym(i) dokumentom(ami), za predpokladu, že sa používajú v súlade s našim návodom:

25 ürünün, talimatlanmıza göre kullanılması koşuluyla aşağıdaki standartlar ve norm belirten belgelerle uyumludur.

10 under iagttagelse af bestemmelserne i: 01 following the provisions of:

12 gitt i henhold til bestemmelsene i: 14 za dodržení ustanovení předpisu: 13 noudattaen määräyksiä: 15 prema odredbama: 11 enligt villkoren i: 16 követi a(z): 03 conformément aux stipulations des: 04 overeenkomstig de bepalingen van: 05 siguiendo las disposiciones de: 07 με τήρηση των διατάξεων των: 08 de acordo com o previsto em: 02 gemäß den Vorschriften der: 06 secondo le prescrizioni per:

23 ievērojot prasības, kas noteiktas:

22 laikantis nuostatų, pateikiamų:

21 следвайки клаузите на:

19 ob upoštevanju določb:

20 vastavalt nõuetele:

25 bunun koşullarına uygun olarak: 24 održiavajúc ustanovenia: 17 zgodnie z postanowieniami Dyrektyw: 18 în urma prevederilor:

09 в соответствии с положениями:

Note *

όπως καθορίζεται στο <Α> και κρίνεται θετικά από delineato nel <A> e giudicato positivamente το <Β> σύμφωνα με το Πιστοποιητικό <C>. da secondo il Certificato <C>. Примечание 07 Σղμείωση* Bemærk * Nota * 08 Nota* 8 ඉ 9 wie in <A> aufgeführt und von positiv beurteilt tel que défini dans <A> et évalué positivement par zoals vermeld in <A> en positief beoordeeld door as set out in <A> and judged positively by positivamente por **** de acuerdo con el **Certificado <**C>. como se establece en <A> y es valorado overeenkomstig Certificaat <C>. Sonfomement au Certificat <C> according to the Certificate <C>. pemails Zertifikat <>>.

> Remarque * 02 Hinweis*

Bemerk *

Nota * 8

14 Poznámka * 15 Napomena* tal como estabelecido em <A> e com o parecer positivo de de acordo com o Certificado <C>. с положительным решением согласно som anført i <A> og posifivt vurderet af i henhold til Certifikat <C>. как указано в <А> и в соответствии Свидетельству <С>

kako je izloženo u <A> i pozitivno ocijenjeno od strane prema Certifikatu <C>.

07 ** Η DICZ*** είναι εξουσιοδοτημένη να συντάξει τον Τεχνικό φάκελο κατασκευής.

09 ** Компания DICZ*** уполномочена составить Комплект технической документации. 08 ** A DICz*** está autorizada a compilar a documentação técnica de fabrico.

02** DICz** hat die Berechtigung die Technische Konstruktionsakte zusammenzustellen.

01 ** DICz*** is authorised to compile the Technical Construction File.

03 ** DICZ*** est autorisé à compiler le Dossier de Construction Technique.

04** DICz*** is bevoegd om het Technisch Constructiedossier samen te stellen.
05** DICz*** está autorizado a compilar el Archivo de Construcción Técnica.

06 ★ DICz*** è autorizzata a redigere il File Tecnico di Costruzione.

***DICz = Daikin Industries Czech Republic s.r.o.

10 ** DICz*** er autoriseret til at udarbejde de tekniske konstruktionsdata.

11 ** DICz*** är bemyndigade att sammanställa den tekniska konstruktionsfilen. 12 ** DICz*** har tillatelse til å kompilere den Tekniske konstruksjonsfilen.

както е изложено в <А> и оценено положително kaip nustatyta < A> ir kaip teigiamai nuspręsta < B> ako bolo uvedené v <A> a pozitívne zistené kā norādīts <A> un atbilstoši pozitīvajam vērtējumam saskaņā ar sertifikātu <C> от <В> съпасно Сертификата <С> v súlade s osvedčením <C>. pagal Sertifikatą <C>. 07 Οδηγιών, όπως έχουν τροποποιηθεί. 08 Directivas, conforme alteração em. 09 Директив со всеми поправками. 05 Directivas, según lo enmendado. 03 Directives, telles que modifiées. 04 Richtlijnen, zoals geamendeerd. 21 Забележка* 24 Poznámka * 23 Piezīmes * 02 Direktiven, gemäß Änderung. 22 Pastaba* 06 Direttive, come da modifica. 16 Negjegyzés * a(z) <A> alapján, a(z) igazolta a megfelelést, a(z) <C> tanúsítvány szerint. zgodnie z dokumentacją <A>, pozytywną opinią kot je določeno v <A> in odobreno s strani aşa cum este stabilif în <A> şi apreciat pozitiv de în conformitate cu Certificatul <C>. | Świadectwem <C>. Machinery 2006/42/EC ** Electromagnetic Compatibility 2004/108/EC * Low Voltage 2006/95/EC

25 Değiştirilmiş halleriyle Yönetmelikler.

16 irányelv(ek) és módosításaik rendelkezéseit. 18 Directivelor, cu amendamentele respective.

15 Smjemice, kako je izmijenjeno. 17 z późniejszymi poprawkami.

14 v platném znění.

21 Директиви, с техните изменения

Direktiivejä, sellaisina kuin ne ovat muutettuina.

12 Direktiver, med foretatte endringer. 10 Direktiver, med senere ændringer. 11 Direktiv, med företagna ändringar.

01 Directives, as amended.

Direktīvās un to papildinājumos.

24 Smernice, v platnom znení.

19 Direktive z vsemi spremembami.

20 Direktiivid koos muudatustega. 22 Direktyvose su papildymais.

> 22 nagu on näidatud dokumendis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>. v skladu s certifikatom <C>. 17 Uwaga* 19 Opomba 20 Märkus

18 Notă*

otka on esitetty asiakirjassa <A> ja jotka on jak bylo uvedeno v <A> a pozitívně zjištěno v souladu s osvědčením <C>.

13 Huom* 12 Merk*

som det fremkommer i <A> og gjennom positiv

enligt <A> och godkänts av enligt Certifikatet <C>.

11 Information *

bedømmelse av ifølge Sertifikat <C>. nyvāksynyt Sertifikaatin <C> mukaisesti.

DAIKIN.TCF.015 P18/11-2013

74736-KRQ/EMC97-4957

ô

DEKRA (NB0344)

ô \$

> tarafından olumlu olarak değerlendirildiği gibi. <A>'da belirtildiği gibi ve <C> Sertifikasına göre . V

19 ** DICz*** je pooblaščen za sestavo datoteke s tehnično mapo.

21 ** DICz*** е оторизирана да състави Акта за техническа конструкция. 20 ** DICz*** on volitatud koostama tehnilist dokumentatsiooni.

22 ** DICz*** yra įgaliota sudaryti šį techninės konstrukcijos failą. 23 ** DICz*** ir autorizēts sastādīt tehnisko dokumentāciju.

17 ** DICz*** ma upoważnienie do zbierania i opracowywania dokumentacji konstrukcyjnej.

18 ** DICz*** este autorizat să compileze Dosarul tehnic de construcție.

16 ** A DICz*** jogosult a műszaki konstrukciós dokumentáció összeállítására.

14 ** Společnost DICz*** má oprávnění ke kompilaci souboru technické konstrukce

13 ** DICz*** on valtuutettu laatimaan Teknisen asiakirjan.

15 ** DICZ*** je ovlašten za izradu Datoteke o tehničkoj konstrukciji.

24* Społočnosť DICz** je oprávnená vytvoriť súbor technickej konštrukcie. 25** DICz** Teknik Yapi Dosyasni dertemeye yetkildir.

DAIKIN INDUSTRIES CZECH REPUBLIC S.r.o.

3P290872-14S

Pilsen, 1st of Jan. 2014 Managing Director Takayuki Fujii

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

 
Safety Precautions

- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.
- · Meaning of WARNING and CAUTION notices

MARNING.....Failure to follow these instructions properly may result in personal injury or loss of life.

CAUTION......Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

• The safety marks shown in this manual have the following meanings:



- After completing installation, conduct a trial operation to check for faults and explain to the customer how to operate the air conditioner and take care of it with the aid of the operation manual.
- The English text is the original instruction. Other languages are translations of the original instructions.

WARNING

- Ask your dealer or qualified personnel to carry out installation work.
 Do not attempt to install the air conditioner yourself. Improper installation may result in water leakage, electric shocks or fire.
- Install the air conditioner in accordance with the instructions in this installation manual.
 Improper installation may result in water leakage, electric shocks or fire.
- Be sure to use only the specified accessories and parts for installation work. Failure to use the specified parts may result in the unit falling, water leakage, electric shocks or fire.
- Install the air conditioner on a foundation strong enough to withstand the weight of the unit.
 A foundation of insufficient strength may result in the equipment falling and causing injury.
- Electrical work must be performed in accordance with relevant local and national regulations and with instructions in this installation manual. Be sure to use a dedicated power supply circuit only.
 Insufficiency of power circuit capacity and improper workmanship may result in electric shocks or fire.
- Use a cable of suitable length.
 Do not use tapped wires or an extension lead, as this may cause overheating, electric shocks or fire.
- Make sure that all wiring is secured, the specified wires are used, and that there is no strain on the terminal
 connections or wires.

Improper connections or securing of wires may result in abnormal heat build-up or fire.

- When wiring the power supply and connecting the wiring between the indoor and outdoor units, position the wires so that the control box lid can be securely fastened.
 Improper positioning of the control box lid may result in electric shocks, fire or over heating terminals.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- If refrigerant gas leaks during installation, ventilate the area immediately.
 Toxic gas may be produced if the refrigerant comes into contact with fire.

0

4

- After completing installation, check for refrigerant gas leakage.
 Toxic gas may be produced if the refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.
- When installing or relocating the air conditioner, be sure to bleed the refrigerant circuit to ensure it is free of air, and use only the specified refrigerant (R410A).
 - The presence of air or other foreign matter in the refrigerant circuit causes abnormal pressure rise, which may result in equipment damage and even injury.
- During installation, attach the refrigerant piping securely before running the compressor.
 If the refrigerant pipes are not attached and the stop valve is open when the compressor is run, air will be sucked in, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- During pump-down, stop the compressor before removing the refrigerant piping.

 If the compressor is still running and the stop valve is open during pump-down, air will be sucked in when the refrigerant piping is removed, causing abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.
- Be sure to earth the air conditioner.
 Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks.
- Be sure to install an earth leakage circuit breaker.
 Failure to install an earth leakage circuit breaker may result in electric shocks or fire.

Safety Precautions


CAUTION

- Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may cause a fire to break out.
- While following the instructions in this installation manual, install drain piping to ensure proper drainage and insulate piping to prevent condensation.
 - Improper drain piping may result in indoor water leakage and property damage.
- Tighten the flare nut according to the specified method such as with a torque wrench. If the flare nut is too tight, it may crack after prolonged use, causing refrigerant leakage.
- This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial and household use by lay persons.
- Sound pressure level is less than 70 dB (A).

Accessories

Indoor unit (A) - (J)



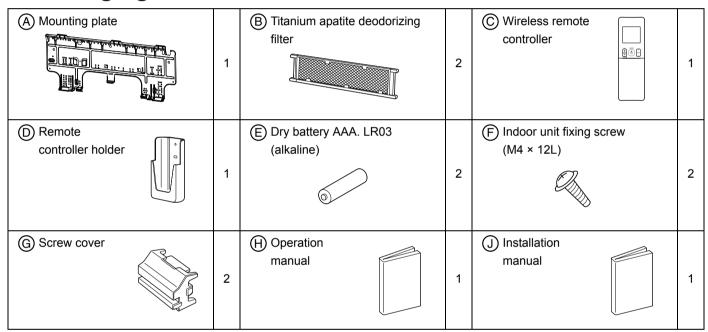

Choosing an Installation Site

Before choosing the installation site, obtain user approval.

Indoor unit


The indoor unit should be sited in a place where:

- 1) the restrictions on installation specified in the indoor unit installation drawings are met,
- 2) both air inlet and air outlet have clear paths met,
- 3) the unit is not in the path of direct sunlight,
- 4) the unit is away from the source of heat or steam,
- 5) there is no source of machine oil vapour (this may shorten indoor unit life),
- 6) cool (warm) air is circulated throughout the room,
- 7) the unit is away from electronic ignition type fluorescent lamps (inverter or rapid start type) as they may shorten the remote controller range,
- 8) the unit is at least 1m away from any television or radio set (unit may cause interference with the picture or sound),
- 9) no laundry equipment is located.

2. Wireless remote controller

Turn on all the fluorescent lamps in the room, if any, and find the site where remote controller signals are properly received by the indoor unit (within 6m).

Indoor Unit Installation Drawings

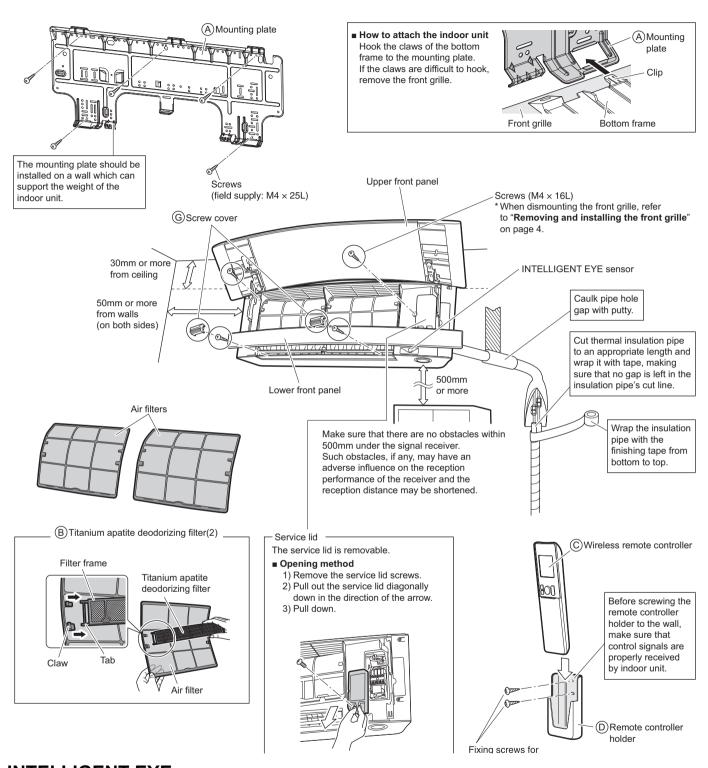

INTELLIGENT EYE sensor

CAUTION -


- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.
- Do not place large objects near the sensor. Also keep heating units or humidifiers outside the sensor's detection area.

Installation Tips

1. Removing and installing the upper front panel

Removal method

- 1) Open the upper front panel.
- 2) Slide the front panel locks on the back of the front panel upward to release the locks (left and right sides).
- 3) Remove the panel shafts on both sides from the shaft holes, and dismount the upper front panel.

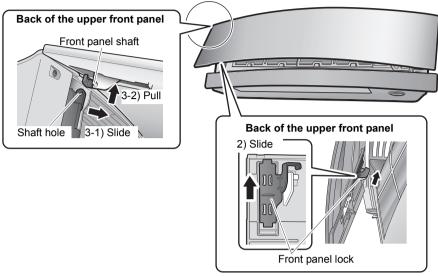

The upper front panel does not open any more than as shown in the figure. Do not force it open any further than that.




- 1) Slide the front panel locks on the back of the front panel upward to release the locks (left and right sides).
- 2) Insert the panel shafts on both sides of the upper front panel into the shaft holes.
- 3) Slide the front panel locks on each side downward to lock them.
- 4) Close the upper panel.
- 5) Do NOT push on the front panel to close it.
- 6) Turn ON the unit by remocon. Wait till the panels are completely open. Then, turn OFF the unit by remocon again.
- 7) Once the front panels close completely, gently push the upper front panel to hook it into position.


6) ONOFF 7) Click* Cli

2. Removing and installing the front grille

Removal method


- 1) Remove the upper front panel and air filters.
- 2) Remove the service lid. (Refer to the opening method on page 3.)
- 3) Disconnect the wire harnesses from the wire clamp, and remove the wire harnesses from the connectors.
- 4) Push the lower front panel up until it stops.
- 5) Dismount the flap (large).
- 6) Open the 2 screw covers, and remove 4 screws from the front grille. (The screw covers are not factory-mounted.)

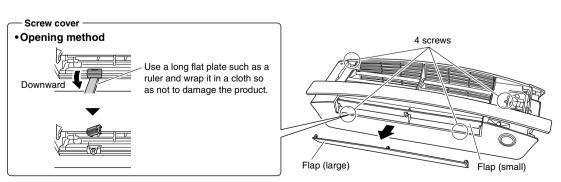


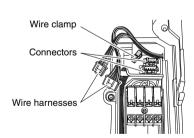

Installation Tips

- Wear protection gloves and insert both hands under the front grille as shown in the figure.
- 8) Remove the front grille from the 3 upper hooks by pushing up the top side of the front grille, pull the front grille toward you by holding both ends of the front grille, and dismount the front grille.
 - If the grille is hard to remove, insert a long flat plate* through the gap in the side cover as shown in the figure, and turn the plate inwards to disengage the hooks (3 hooks each on the right and left sides) so that you can remove the grille easily.
 - * Such as a ruler wrapped in a cloth

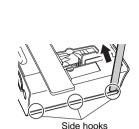

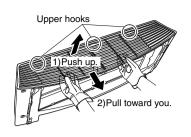



Be sure to wear protection gloves.


Installation method

- 1) Install the front grille and firmly engage the upper hooks (3 locations), right and left sides hooks (each 3 locations).
- 2) Install 4 screws of the front grille, and close the 2 screw covers.
- 3) Mount the flap (large).
- 4) Lower the lower front panel to the original position.
- 5) Attach the wire harnesses to the 2 connectors and secure the wire harnesses with the wire clamp.
- 6) Install the air filter and then mount the upper front panel.

3. How to set the different addresses

When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.

- 1) Remove the upper front panel and front grille. (4 screws)
- Cut the address jumper (JA) on the printed circuit board.
- 3) Cut the address jumper (J4) in the remote controller.
 - Be careful not to cut jumper (J8).

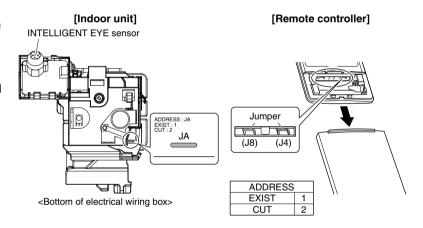


4. When connecting to an HA system

(wired remote controller, central remote controller etc.)


Removal methods of metal plate electrical wiring covers

- 1) Remove the upper front panel and front grille. (4 screws)
- Remove the electrical wiring box. (1 screw)
- 3) Remove the 4 tabs and dismount the metal plate electrical wiring cover (A).
- Pull down the hook on the metal plate electrical wiring cover (B), and remove a single tab.
- 5) Remove the 2 tabs on the top part and dismount the metal plate electrical wiring cover (B).

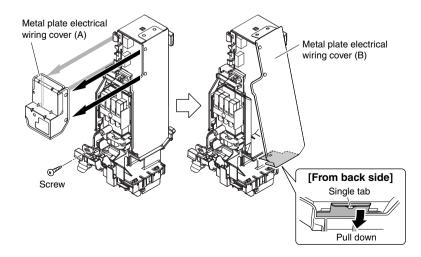


Installation Tips

 - Attachment methods of connection cord
 - 1) Remove the factory-mounted connector from S21.
 - 2) Tie the harnesses in a bundle as shown in the figure so that the removed connector does not interfere with the printed circuit board.




- 3) Attach the connection cord to the S21 connector and pull the harness out through the notched part in the figure.
- 4) Pull the harness around, as shown in the figure.

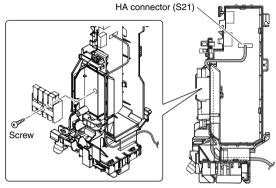

Attachment methods of metal plate electrical wiring covers

- 1) Hook the top part of the metal plate electrical wiring cover (B) on the 2 tabs.
- 2) Press in the hook on the bottom to catch a single tab, and mount the metal plate electrical wiring cover (B).
- 3) Insert the connector into the hole, and hook and mount the metal plate electrical wiring cover (A) onto the 4 tabs.

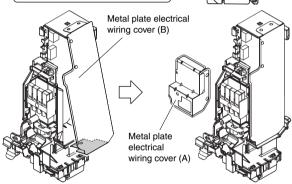


Refrigerant Piping Work

With a multi indoor unit, install as described in the installation manual supplied with the multi outdoor unit.

Flaring the pipe end

- 1) Cut the pipe end with a pipe cutter.
- 2) Remove burrs with the cut surface facing downward so that the chips do not enter the pipe.
- 3) Put the flare nut on the pipe.
- 4) Flare the pipe.
- 5) Check that the flaring is properly made.

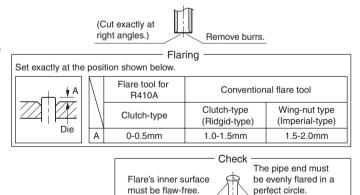

↑ WARNING

- Do not use mineral oil on flared part.
- · Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Never use piping which has been used for previous installations. Only use parts which are delivered with the unit.
- Never install a drier to this R410A unit in order to guarantee its lifetime.
- The drying material may dissolve and damage the system.
- Incomplete flaring may cause refrigerant gas leakage.

Make sure that the flare nut is fitted.


Refrigerant Piping Work

2. Refrigerant piping

↑ CAUTION

- · Use the flare nut fixed to the main unit. (To prevent cracking of the flare nut by aged deterioration.)
- To prevent gas leakage, apply refrigeration oil only to the inner surface of the flare. (Use refrigeration oil for R410A.)
- Use torque wrenches when tightening the flare nuts to prevent damage to the flare nuts and gas leakage.


Align the centres of both flares and tighten the flare nuts 3 or 4 turns by hand. Then tighten them fully with the torque wrenches.

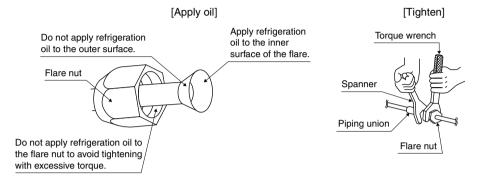

Flare nut tightening torque					
Gas side		Liquid side			
3/8 inch	1/2 inch	1/4 inch			
32.7-39.9N•m (330-407kgf•cm)	49.5-60.3N•m (505-615kgf•cm)	14.2-17.2N•m (144-175kgf•cm)			

2-1. Caution on piping handling


- 1) Protect the open end of the pipe against dust and moisture.
- 2) All pipe bends should be as gentle as possible. Use a pipe bender for bending.

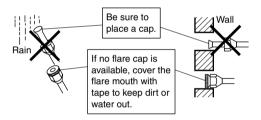

2-2. Selection of copper and heat insulation materials

When using commercial copper pipes and fittings, observe the following:

1) Insulation material: Polyethylene foam
Heat transfer rate: 0.041 to 0.052W/mK (0.035 to 0.045kcal/mh°C)
Refrigerant gas pipe's surface temperature reaches 110°C max.
Choose heat insulation materials that will withstand this temperature.

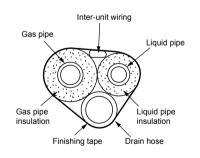

Be sure to insulate both the gas and liquid piping and to provide insulation dimensions as below.

Gas side		Liquid side	Gas pipe thermal insulation		Liquid pipe thermal insulation	
25/35 class	50 class	O.D. 6.4mm	25/35 class	50 class	I.D. 8-10mm	
O.D. 9.5mm	O.D. 12.7mm	O.D. 0.4IIIII	I.D. 12-15mm	I.D. 14-16mm	1.D. 0-10111111	
Minimum bend radius		Thickness 10mm Min.				
30mm or more	40mm or more	30mm or more				
Thickness 0.8mm (C1220T-O)						


3) Use separate thermal insulation for gas and liquid refrigerant pipes.

1. Installing the mounting plate

The mounting plate should be installed on a wall which can support the weight of the indoor unit.

- 1) Temporarily secure the mounting plate to the wall, make sure that the unit is completely level, and mark the boring points on the wall.
- 2) Secure the mounting plate to the wall with screws.

Recommended mounting plate retention spots and dimensions

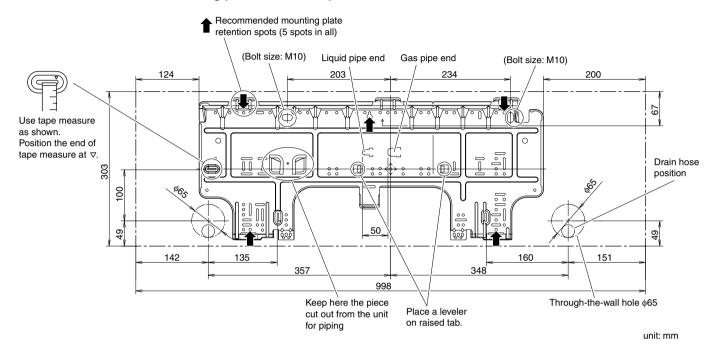


2. Boring a wall hole and installing wall embedded pipe

- For walls containing metal frame or metal board, be sure to use a
 wall embedded pipe and wall hole cover in the feed-through hole to
 prevent possible heat, electrical shock, or fire.
- Be sure to caulk the gaps around the pipes with caulking material to prevent water leakage.
 - 1) Bore a feed-through hole of 65mm in the wall so it has a down slope toward the outside.
 - 2) Insert a wall embedded pipe into the hole.
 - 3) Insert a wall hole cover into wall pipe.
 - 4) After completing refrigerant piping, wiring, and drain piping, caulk pipe hole gap with putty.

Wall embedded pipe (field supply) Wall hole cover (field supply) Wall embedded pipe (field supply)

3. Inter-unit wiring

- 1) Remove the upper front panel, then remove the service lid
- 2) Pass the inter-unit wire from the outdoor unit through the feed-through wall hole and then through the back of the indoor unit. Pull them through the front side. Bend the ends of tie wires upward for easier work in advance. (If the inter-unit wire ends are to be stripped first, bundle wire ends with adhesive tape.)
- 3) Press the bottom frame of the indoor unit with both hands to set it on the mounting plate hooks. Make sure the wires do not catch on the edge of the indoor unit.

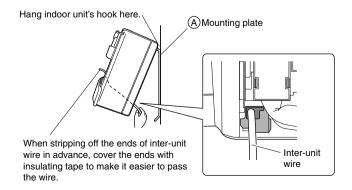



Laying piping, hoses, and wiring


- The recommended installation method is back piping.
- When performing bottom piping or side piping, refer to "5. Bottom or side piping" on page 10.

4-1. Right-back piping

  - 1) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 2) Wrap the inter-unit wire, refrigerant pipes and drain hose together with insulation tape.



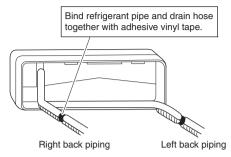



4-2. Left-back piping

How to replace the drain plug and drain hose Drain hose attachment position Replacing onto the left side The drain hose is on the back of the unit. 1) Remove the insulation fixing screw on the right and remove the drain hose. 2) Remove the drain plug on the left side and attach it to the right side. Left side Right side 3) Insert the drain hose and tighten with included Front side of unit insulation fixing screw. Forgetting to tighten this Attachment on the left side Attachment on the right side may cause water leakages. (factory default) Insulation Insulation fixing screw fixing screw

- 1) Replace the drain plug and drain hose.
- 2) Attach the drain hose to the underside of the refrigerant pipes with adhesive vinyl tape.
- 3) Be sure to connect the drain hose to the drain port in place of a drain plug.


How to set drain plug




Do not apply lubricating oil (refrigerant oil) to the drain plug when inserting it. The application of lubrication oil to the drain plug will deteriorate the plug to cause drain leakage from the plug.

Drain hose

- 4) Shape the refrigerant pipe along the pipe path marking on the mounting plate.
- 5) Pass drain hose and refrigerant pipes through the wall hole, then set the indoor unit on mounting plate hooks, using the \wedge markings at the top of indoor unit as a guide.
- 6) Pull in the inter-unit wire.
- 7) Connect the inter-unit pipes.
- 8) Wrap the refrigerant pipes and drain hose together with insulation tape as shown in the figure on the right (in case of setting the drain hose through the back of the indoor unit).

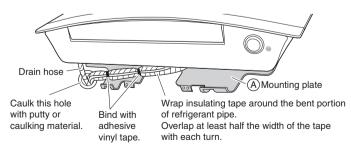


9) While exercising care so that the inter-unit wire does not catch the indoor unit, press the bottom edge of indoor unit with both hands until it is firmly caught by the mounting plate hooks. Secure indoor unit to the mounting plate with indoor unit fixing screws (M4 × 12L).

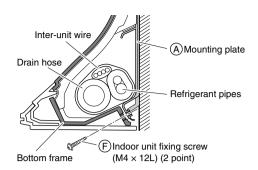


4-3. Wall embedded piping

 Follow the instructions given under left-back piping. Insert the drain hose to this depth so it won't be pulled out of the drain pipe.



Bottom or side piping

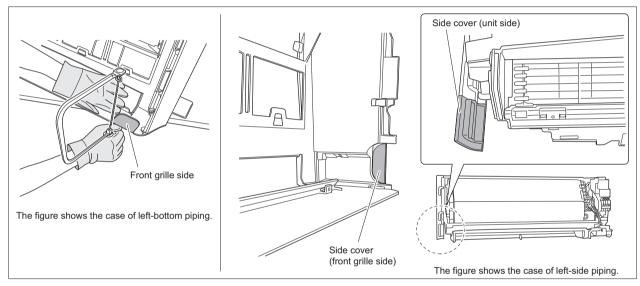



- 1) Cut off the pipe port cover with a copping saw.
 - For bottom piping: On the bottom of the front grille
 - For side piping: On the side cover (front grille side and unit side)

Apply the blade of the copping saw to the notch, and cut off the pipe port cover along the uneven inner surface.

- 2) After cutting off the pipe port cover, perform filing. Remove the burrs along the cut section using a half round needle file.
- 3) Wrap the inter-unit wire, refrigerant pipes and drain hose together with insulation tape.

 Then, insert the drain hose and refrigerant pipes into the wall hole after inserting them into the cut out piping hole opened.

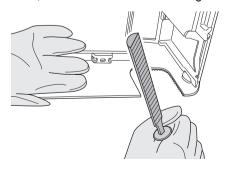

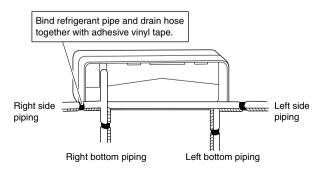


NOTE


- Be careful not to let chips enter the driving section of the arm.
- Be careful not to put pressure on the lower front panel.

6. Wiring

With a multi indoor unit, install as described in the installation manual supplied with the multi outdoor unit.

- 1) Strip wire ends (15mm).
- Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.
- 3) Connect the earth wires to the corresponding terminals.
- 4) Pull wires to make sure that they are securely latched up, then retain wires with wire retainer.
- 5) In case of connecting to an adapter system, run the remote controller cable and attach the S21.
- 6) Shape the wires so that the service lid fits securely, then close service lid.

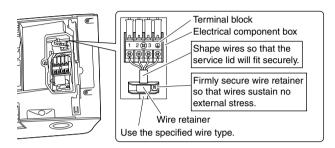


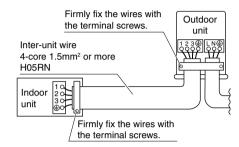

CAUTION

When connecting the connection wires to the terminal block using a single core wire, be sure to perform curling.

 Problems with the installation may cause heat and fires.



♠ WARNING -


- Do not use tapped wires, extension cords, or starburst connections, as they may cause overheating, electrical shock, or fire.
- Do not use locally purchased electrical parts inside the product. (Do not branch the power for the drain pump, etc., from the terminal block.) Doing so may cause electric shock or fire.
- Do not connect the indoor unit to the mains electricity. Connect it to the outdoor unit only or there may be danger of electric shock or fire.

Wiring diagram

Unified Wiring Diagram Legend							
For applied parts and numbering refer to the wiring diagram sticker supplied on the unit. Part numbering is realized by Arabic numbers in ascending order for each part and is represented in the overview below by symbol "" in the part code.							
/	: CIRCUIT BREAKER		(PROTECTIVE EARTH			
-	: CONNECTION			: PROTECTIVE EARTH (SCREW)			
oo-← oo,	: CONNECTOR		A	RECTIFIER			
Ţ	: EARTH		—)—	: RELAY CONNECTOR			
	: FIELD WIRING			: SHORT CIRCUIT CONNECTOR			
	: FUSE		—	TERMINAL			
INDOOR	: INDOOR UNIT			: TERMINAL STRIP			
OUTDOOR	: OUTDOOR UNIT		O •	: WIRE CLAMP			
BLK : BLACK	GRN : GREEN	PNK	: PINK	WHT : WHITE			
BLU : BLUE	GRY : GREY	PRP, PPL	: PURPLE	YLW : YELLOW			
BRN : BROWN	ORG : ORANGE	RED	: RED				
4 *P	: PRINTED CIRCUIT BOARD		PS	: SWITCHING POWER SUPPLY			
BS*	: PUSH BUTTON ON / OFF, OPERATION SWITE	CH	PTC*	: THERMISTOR PTC			
BZ, H*O	: BUZZER		Q*	: INSULATED GATE BIPOLAR TRANSISTOR (IGBT)			
C *	: CAPACITOR		Q*DI	EARTH LEAK CIRCUIT BREAKER			
AC*, CN*, E*, HA*, HE, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A	: CONNECTION, CONNECTOR		Q*L	OVERLOAD PROTECTOR			
D*, V*D	: DIODE		Q*M	: THERMO SWITCH			
DB*	: DIODE BRIDGE		R*				
OS*	: DIP SWITCH		R*T	: THERMISTOR			
E*H	: HEATER		RC				
	: FUSE		S*C	: LIMIT SWITCH			
FG*	: CONNECTOR (FRAME GROUND)		S*L	: FLOAT SWITCH			
H*	: HARNESS		S*NPH	PRESSURE SENSOR (HIGH)			
H*P, LED*, V*L	: PILOT LAMP, LIGHT EMITTING DIODE		S*NPL	PRESSURE SENSOR (LOW)			
HAP	: LIGHT EMITTING DIODE (SERVICE MONITOR	R GREEN)	S*PH, HPS*	PRESSURE SWITCH (HIGH)			
HIGH VOLTAGE	: HIGH VOLTAGE	,	S*PL	PRESSURE SWITCH (LOW)			
ES	: INTELLIGENT EYE SENSOR		S*T	THERMOSTAT			
PM*	: INTELLIGENT POWER MODULE		S*W, SW*	: OPERATION SWITCH			
K*R, KCR, KFR, KHuR	MAGNETIC RELAY		SA*	: SURGE ARRESTOR			
	LIVE		SR*, WLU	: SIGNAL RECEIVER			
	: COIL		SS*	: SELECTOR SWITCH			
- _*R	: REACTOR		SHEET METAL				
M*	: STEPPER MOTOR			: TRANSFORMER			
vi M*C	: COMPRESSOR MOTOR			: TRANSMITTER			
M*F	: FAN MOTOR			: VARISTOR			
vi i M*P	: DRAIN PUMP MOTOR			: DIODE BRIDGE			
M*S	: SWING MOTOR		WRC	: WIRELESS REMOTE CONTROLLER			
MR*, MRCW*, MRM*, MRN*	: MAGNETIC RELAY		X*	: TERMINAL			
N *	: NEUTRAL	ODE	X*M	: TERMINAL STRIP (BLOCK)			
n=*	: NUMBER OF PASSES THROUGH FERRITE CO	JKE	Y*E	ELECTRONIC EXPANSION VALVE COIL			
PAM	: PULSE-AMPLITUDE MODULATION		Y*R, Y*S	: REVERSING SOLENOID VALVE COIL			
PCB*	PRINTED CIRCUIT BOARD		Z*C	: FERRITE CORE			
PM*	: POWER MODULE		ZF, Z*F	: NOISE FILTER			

7. Drain piping

 
1) Connect the drain hose, as described right.




the indoor unit

3) When drain hose requires extension, obtain an extension hose with an inner diameter of 16mm.

 Be sure to thermally insulate the indoor section of the extension hose.



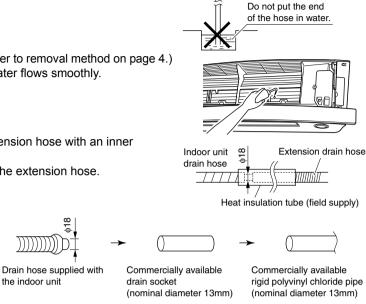

The drain hose should be inclined downward.

No trap is permitted.

Trial Operation and Testing

Trial operation and testing

- 1-1 Measure the supply voltage and make sure that it falls in the specified range.
- 1-2 Trial operation should be carried out in either cooling or heating mode.

In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

Trial operation may be disabled in either mode depending on the room temperature.
 Use the remote controller for trial operation as described below.

Trial operation from remote controller

- 1) Press "ON/OFF" button to turn on the system.
- 2) Press "TEMP" button and "MODE" button at the same time.
- 3) Press "TEMP" button and select "7-".
- 4) Press "MODE" button.
- 5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press "ON/OFF" button.
- 2) After trial operation is complete, set the temperature to a normal level (26°C to 28°C in cooling mode, 20°C to 24°C in heating mode).
- 3) For protection, the system disables restart operation for 3 minutes after it is turned off.
- 1-3 Carry out the test operation in accordance with the operation manual to ensure that all functions and parts, such as louvres movement, are working properly.
 - The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

2. Test items

Test items	Symptom	Check
Indoor and outdoor units are installed properly on solid bases.	Fall, vibration, noise	
No refrigerant gas leaks.	Incomplete cooling/heating function	
Refrigerant gas and liquid pipes and indoor drain hose extension are thermally insulated.	Water leakage	
Draining line is properly installed.	Water leakage	
System is properly earthed.	Electrical leakage	
The specified wires are used for inter-unit wiring.	Inoperative or burn damage	
Indoor or outdoor unit's air inlet or air outlet has clear path of air. Stop valves are opened.	Incomplete cooling/heating function	
Indoor unit properly receives remote control commands.	Inoperative	

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2014 Daikin

