




Installation manual

R32 split series

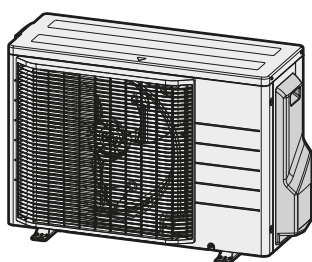

ARXF50F5V1B

Installation manual
R32 split series

English

01	Ⓔ continuation of previous page	08	Ⓔ continuarea de pagina anterioară	12	Ⓔ fortsettelse fra brige side	13	Ⓔ nastavak s prethodne stranice	18	Ⓔ nadležanje s prejšnje strani	22	Ⓔ ankastino postupak lepnis
02	Fortsättning der föregående sida	09	Ⓔ pokračování předchozí stránky	13	Ⓔ jatka edellisen sivulla	14	Ⓔ jatka edellisen sivulla	16	Ⓔ jatka edellisen sivulla	23	Ⓔ jatkajaksen lapsuus toimittajans
03	Ⓔ suite de la page précédente	10	Ⓔ ovrjeđeno po prethodnoj strani	14	Ⓔ pokračování z předchozí strany	17	Ⓔ ovrjeđeno po prethodnoj strani	18	Ⓔ nadležanje s prejšnje strani	24	Ⓔ ovrjeđeno po prethodnoj strani
04	Ⓔ voortzetting van vorige pagina	11	Ⓔ fortsettning fra forrige side	15	Ⓔ fortsettning fra forrige side	18	Ⓔ nastavak s prethodne stranice	20	Ⓔ denisse leikluje jag	25	Ⓔ önsket steyðan deyan
05	Ⓔ continuation de la página anterior	12	Ⓔ fortsettning av föregående sida	16	Ⓔ jatka edellisen sivulla	19	Ⓔ jatka edellisen sivulla	21	Ⓔ denisse leikluje jag	26	Ⓔ önsket steyðan deyan
06	Ⓔ continua della pagina anteriore	13	Ⓔ fortsettning av föregående sida	17	Ⓔ ovrjeđeno po prethodnoj strani	20	Ⓔ denisse leikluje jag	22	Ⓔ ankastino postupak lepnis	27	Ⓔ ankastino postupak lepnis
07	Ⓔ suite de la page précédente	14	Ⓔ pokračování předchozí stránky	21	Ⓔ denisse leikluje jag	24	Ⓔ ovrjeđeno po prethodnoj strani	26	Ⓔ önsket steyðan deyan	28	Ⓔ ankastino postupak lepnis
08	Ⓔ voortzetting van vorige pagina	15	Ⓔ fortsettning fra forrige side	22	Ⓔ ankastino postupak lepnis	25	Ⓔ önsket steyðan deyan	27	Ⓔ ankastino postupak lepnis	29	Ⓔ ankastino postupak lepnis
09	Ⓔ continuarea de pagina anterioară	16	Ⓔ jatka edellisen sivulla	23	Ⓔ jatkajaksen lapsuus toimittajans	26	Ⓔ önsket steyðan deyan	28	Ⓔ ankastino postupak lepnis	30	Ⓔ ankastino postupak lepnis
10	Ⓔ ovrjeđeno po prethodnoj strani	17	Ⓔ ovrjeđeno po prethodnoj strani	24	Ⓔ ovrjeđeno po prethodnoj strani	27	Ⓔ ankastino postupak lepnis	30	Ⓔ ankastino postupak lepnis	31	Ⓔ ankastino postupak lepnis
11	Ⓔ fortsettning fra forrige side	18	Ⓔ nastavak s prethodne stranice	25	Ⓔ önsket steyðan deyan	28	Ⓔ ankastino postupak lepnis	31	Ⓔ ankastino postupak lepnis	32	Ⓔ ankastino postupak lepnis
12	Ⓔ fortsettning av föregående sida	19	Ⓔ jatka edellisen sivulla	26	Ⓔ önsket steyðan deyan	29	Ⓔ ankastino postupak lepnis	32	Ⓔ ankastino postupak lepnis	33	Ⓔ ankastino postupak lepnis
13	Ⓔ jatka edellisen sivulla	20	Ⓔ denisse leikluje jag	27	Ⓔ ankastino postupak lepnis	30	Ⓔ ankastino postupak lepnis	33	Ⓔ ankastino postupak lepnis	34	Ⓔ ankastino postupak lepnis
14	Ⓔ pokračování předchozí stránky	21	Ⓔ denisse leikluje jag	28	Ⓔ ankastino postupak lepnis	31	Ⓔ ankastino postupak lepnis	34	Ⓔ ankastino postupak lepnis	35	Ⓔ ankastino postupak lepnis
15	Ⓔ fortsettning fra forrige side	22	Ⓔ ankastino postupak lepnis	29	Ⓔ ankastino postupak lepnis	32	Ⓔ ankastino postupak lepnis	35	Ⓔ ankastino postupak lepnis	36	Ⓔ ankastino postupak lepnis
16	Ⓔ jatka edellisen sivulla	23	Ⓔ jatkajaksen lapsuus toimittajans	30	Ⓔ ankastino postupak lepnis	33	Ⓔ ankastino postupak lepnis	36	Ⓔ ankastino postupak lepnis	37	Ⓔ ankastino postupak lepnis
17	Ⓔ ovrjeđeno po prethodnoj strani	24	Ⓔ ovrjeđeno po prethodnoj strani	31	Ⓔ ankastino postupak lepnis	34	Ⓔ ankastino postupak lepnis	37	Ⓔ ankastino postupak lepnis	38	Ⓔ ankastino postupak lepnis
18	Ⓔ nastavak s prethodne stranice	25	Ⓔ önsket steyðan deyan	32	Ⓔ ankastino postupak lepnis	35	Ⓔ ankastino postupak lepnis	38	Ⓔ ankastino postupak lepnis	39	Ⓔ ankastino postupak lepnis
19	Ⓔ jatka edellisen sivulla	26	Ⓔ önsket steyðan deyan	33	Ⓔ ankastino postupak lepnis	36	Ⓔ ankastino postupak lepnis	39	Ⓔ ankastino postupak lepnis	40	Ⓔ ankastino postupak lepnis
20	Ⓔ denisse leikluje jag	27	Ⓔ ankastino postupak lepnis	34	Ⓔ ankastino postupak lepnis	37	Ⓔ ankastino postupak lepnis	40	Ⓔ ankastino postupak lepnis	41	Ⓔ ankastino postupak lepnis
21	Ⓔ denisse leikluje jag	28	Ⓔ ankastino postupak lepnis	35	Ⓔ ankastino postupak lepnis	38	Ⓔ ankastino postupak lepnis	41	Ⓔ ankastino postupak lepnis	42	Ⓔ ankastino postupak lepnis
22	Ⓔ ankastino postupak lepnis	29	Ⓔ ankastino postupak lepnis	36	Ⓔ ankastino postupak lepnis	39	Ⓔ ankastino postupak lepnis	42	Ⓔ ankastino postupak lepnis	43	Ⓔ ankastino postupak lepnis
23	Ⓔ jatkajaksen lapsuus toimittajans	30	Ⓔ ankastino postupak lepnis	37	Ⓔ ankastino postupak lepnis	40	Ⓔ ankastino postupak lepnis	43	Ⓔ ankastino postupak lepnis	44	Ⓔ ankastino postupak lepnis
24	Ⓔ ovrjeđeno po prethodnoj strani	31	Ⓔ ankastino postupak lepnis	38	Ⓔ ankastino postupak lepnis	41	Ⓔ ankastino postupak lepnis	44	Ⓔ ankastino postupak lepnis	45	Ⓔ ankastino postupak lepnis
25	Ⓔ önsket steyðan deyan	32	Ⓔ ankastino postupak lepnis	39	Ⓔ ankastino postupak lepnis	42	Ⓔ ankastino postupak lepnis	45	Ⓔ ankastino postupak lepnis	46	Ⓔ ankastino postupak lepnis
26	Ⓔ önsket steyðan deyan	33	Ⓔ ankastino postupak lepnis	40	Ⓔ ankastino postupak lepnis	43	Ⓔ ankastino postupak lepnis	46	Ⓔ ankastino postupak lepnis	47	Ⓔ ankastino postupak lepnis
27	Ⓔ ankastino postupak lepnis	34	Ⓔ ankastino postupak lepnis	41	Ⓔ ankastino postupak lepnis	44	Ⓔ ankastino postupak lepnis	47	Ⓔ ankastino postupak lepnis	48	Ⓔ ankastino postupak lepnis
28	Ⓔ ankastino postupak lepnis	35	Ⓔ ankastino postupak lepnis	42	Ⓔ ankastino postupak lepnis	45	Ⓔ ankastino postupak lepnis	48	Ⓔ ankastino postupak lepnis	49	Ⓔ ankastino postupak lepnis

[illegible][illegible]

Table of contents

1	About the documentation	4
1.1	About this document.....	4
2	Specific installer safety instructions	5
3	About the box	6
3.1	Outdoor unit.....	6
3.1.1	To remove the accessories from the outdoor unit.....	6
4	Unit installation	7
4.1	Preparing the installation site	7
4.1.1	Installation site requirements of the outdoor unit	7
4.1.2	Additional installation site requirements of the outdoor unit in cold climates	7
4.2	Mounting the outdoor unit.....	7
4.2.1	To provide the installation structure	7
4.2.2	To install the outdoor unit.....	8
4.2.3	To provide drainage	8
5	Piping installation	8
5.1	Preparing refrigerant piping	8
5.1.1	Refrigerant piping requirements.....	8
5.1.2	Refrigerant piping insulation	9
5.1.3	Refrigerant piping length and height difference	9
5.2	Connecting the refrigerant piping	9
5.2.1	To connect the refrigerant piping to the outdoor unit ..	9
5.3	Checking the refrigerant piping.....	9
5.3.1	To check for leaks.....	9
5.3.2	To perform vacuum drying	10
6	Charging refrigerant	10
6.1	About the refrigerant.....	10
6.2	To determine the additional refrigerant amount.....	10
6.3	To determine the complete recharge amount.....	10
6.4	To charge additional refrigerant.....	10
6.5	To check refrigerant piping joints for leaks after charging refrigerant	10
6.6	To fix the fluorinated greenhouse gases label.....	11
7	Electrical installation	11
7.1	Specifications of standard wiring components	11
7.2	To connect the electrical wiring to the outdoor unit	11
8	Finishing the outdoor unit installation	12
8.1	To finish the outdoor unit installation	12
9	Commissioning	12
9.1	Checklist before commissioning	12
9.2	Checklist during commissioning	13
9.3	To perform a test run	13
10	Maintenance and service	13
11	Troubleshooting	13
11.1	Fault diagnosis using LED on outdoor unit PCB	13
12	Disposal	14
13	Technical data	14
13.1	Wiring diagram	14
13.1.1	Unified wiring diagram legend.....	14
13.2	Piping diagram.....	15
13.2.1	Piping diagram: Outdoor unit	15

1 About the documentation

1.1 About this document

**WARNING**

Make sure installation, servicing, maintenance, repair and applied materials follow the instructions from Daikin (including all documents listed in "Documentation set") and, in addition, comply with applicable legislation and are performed by qualified persons only. In Europe and areas where IEC standards apply, EN/IEC 60335-2-40 is the applicable standard.

**INFORMATION**

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

Target audience

Authorised installers

**INFORMATION**

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

**INFORMATION**

This document only describes installation instructions specific to the outdoor unit. For installation of the indoor unit (mounting the indoor unit, connecting the refrigerant piping to the indoor unit, connecting the electrical wiring to the indoor unit ...), see the installation manual of the indoor unit.

Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
 - Safety instructions that you **MUST** read before installing
 - Format: Paper (in the box of the outdoor unit)
- **Outdoor unit installation manual:**
 - Installation instructions
 - Format: Paper (in the box of the outdoor unit)
- **Installer reference guide:**
 - Preparation of the installation, reference data, ...
 - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

Scan the QR code below to find the full documentation set and more information about your product on the Daikin website.



The original instructions are written in English. All other languages are translations of the original instructions.

Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

Unit installation (see ["4 Unit installation" \[p 7\]](#))



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

Installation site (see ["4.1 Preparing the installation site" \[p 7\]](#))



CAUTION

- Check if the installation location can support the unit's weight. Poor installation is hazardous. It can also cause vibrations or unusual operating noise.
- Provide sufficient service space.
- Do NOT install the unit so that it is in contact with a ceiling or a wall, as this may cause vibrations.



WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.

Piping installation (see ["5 Piping installation" \[p 8\]](#))



A2L

WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



CAUTION

- No brazing or welding on site for units with R32 refrigerant charge during shipment.
- During installation of the refrigeration system, joining of parts with at least one part charged shall be performed taking into account the following requirements: inside occupied spaces non-permanent joints are NOT allowed for R32 refrigerant except for site made joints directly connecting the indoor unit to piping. Site made joints directly connecting piping to indoor units shall be of non-permanent type.



WARNING

Connect the refrigerant piping securely before running the compressor. If the refrigerant piping is NOT connected and the stop valve is open when the compressor is run, air will be sucked in. This will cause abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.



CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.



CAUTION

Do NOT open the valves before flaring is complete. This would cause refrigerant gas leakage.



DANGER: RISK OF EXPLOSION

Do NOT open the stop valves before the vacuum drying is finished.

Charging refrigerant (see ["6 Charging refrigerant" \[p 10\]](#))



WARNING

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.



WARNING

NEVER directly touch any accidental leaking refrigerant. This could result in severe wounds caused by frostbite.

Electrical installation (see ["7 Electrical installation" \[p 11\]](#))



WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, extension cords, or connections from a star system. They can cause overheating, electrical shocks or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

3 About the box



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



WARNING

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.



WARNING

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

Finishing indoor unit installation (see ["8 Finishing the outdoor unit installation"](#) [p 12])



DANGER: RISK OF ELECTROCUTION

- Make sure that the system is earthed properly.
- Turn OFF the power supply before servicing.
- Install the switch box cover before turning ON the power supply.

Commissioning (see ["9 Commissioning"](#) [p 12])



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING



CAUTION

Do NOT perform the test operation while working on the indoor unit(s).

When performing the test operation, NOT ONLY the outdoor unit, but the connected indoor unit will operate as well. Working on an indoor unit while performing a test operation is dangerous.



CAUTION

Do NOT insert fingers, rods or other objects into the air inlet or outlet. Do NOT remove the fan guard. When the fan is rotating at high speed, it will cause injury.

Maintenance and service (see ["10 Maintenance and service"](#) [p 13])



DANGER: RISK OF ELECTROCUTION



DANGER: RISK OF BURNING/SCALDING



DANGER: RISK OF ELECTROCUTION

All electrical parts (including thermistors) are powered by the power supply. Do NOT touch them with bare hands.



DANGER: RISK OF ELECTROCUTION

Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage MUST be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.



WARNING

- Before carrying out any maintenance or repair activity, ALWAYS switch off the circuit breaker on the supply panel, remove the fuses or open the protection devices of the unit.
- Do NOT touch live parts for 10 minutes after the power supply is turned off because of high voltage risk.
- Please note that some sections of the electric component box are hot.
- Make sure you do NOT touch a conductive section.
- Do NOT rinse the unit. This may cause electric shocks or fire.

About the compressor



DANGER: RISK OF ELECTROCUTION

- Use this compressor on a grounded system only.
- Turn the power off before servicing the compressor.
- Reattach the switch box cover and service lid after servicing.



CAUTION

ALWAYS wear safety glasses and protective gloves.



DANGER: RISK OF EXPLOSION

- Use a pipe cutter to remove the compressor.
- Do NOT use the brazing torch.
- Use approved refrigerants and lubricants only.



DANGER: RISK OF BURNING/SCALDING

Do NOT touch the compressor with bare hands.

Troubleshooting (see ["11 Troubleshooting"](#) [p 13])



DANGER: RISK OF ELECTROCUTION


- When the unit is NOT operating, the LEDs on the PCB are turned OFF in order to save power.
- Even when the LEDs are OFF, the terminal block and the PCB may be powered.

3 About the box

3.1 Outdoor unit

3.1.1 To remove the accessories from the outdoor unit

Make sure you have all following accessories delivered with the unit:

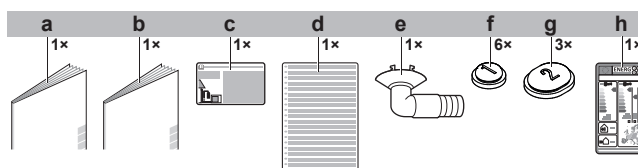

a General safety precautions

- b Outdoor unit installation manual
- c Fluorinated greenhouse gases label
- d Multilingual fluorinated greenhouse gases label
- e Drain plug (located on the bottom of the packing case)
- f Drain cap (1)
- g Drain cap (2)
- h Energy label

4 Unit installation



WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

4.1 Preparing the installation site




WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.

4.1.1 Installation site requirements of the outdoor unit

Mind the following spacing guidelines:

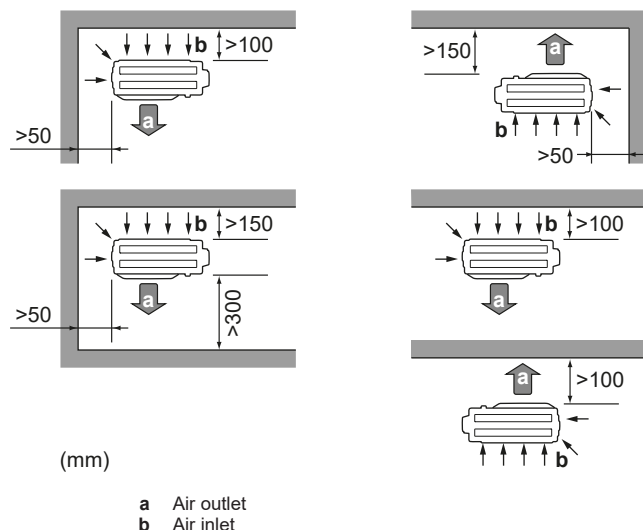

NOTICE

The height of the wall on the outlet side of the outdoor unit **MUST** be ≤1200 mm.

Do NOT install the unit in sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.

Note: If the sound is measured under actual installation conditions, the measured value might be higher than the sound pressure level mentioned in "Sound spectrum" in the data book due to environmental noise and sound reflections.



INFORMATION


The sound pressure level is less than 70 dBA.

The outdoor unit is designed for outdoor installation only and for ambient temperatures specified in the table below (unless otherwise specified in the operation manual of the connected indoor unit).

Cooling	Heating
-10~48°C DB	-15~24°C DB

4.1.2 Additional installation site requirements of the outdoor unit in cold climates

Protect the outdoor unit against direct snowfall and take care that the outdoor unit is NEVER snowed up.

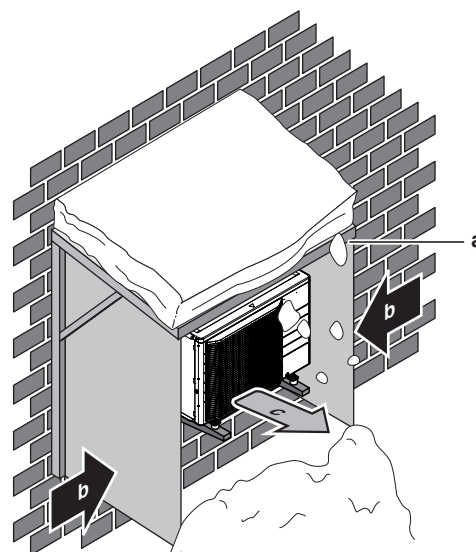

It is recommended to provide at least 150 mm of free space below the unit (300 mm for heavy snowfall areas). Additionally, make sure the unit is positioned at least 100 mm above the maximum expected level of snow. See "4.2 Mounting the outdoor unit" [7] for more details.

 
In heavy snowfall areas it is very important to select an installation site where the snow will NOT affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is NOT affected by the snow. If necessary, install a snow cover or shed.

4.2 Mounting the outdoor unit


4.2.1 To provide the installation structure

Use a vibration-proof rubber (field supply) in cases where vibrations may be transmitted to the building.


Prepare 4 sets of M8 or M10 anchor bolts, nuts and washers (field supply).



5 Piping installation

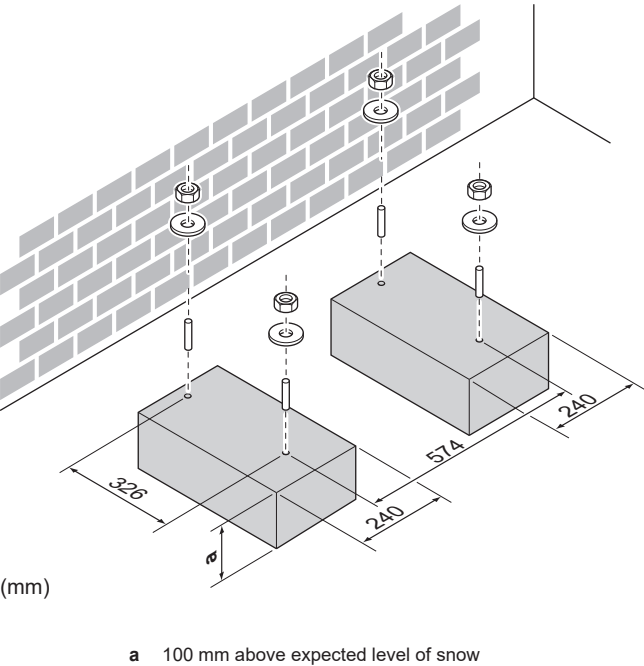

4.2.2 To install the outdoor unit

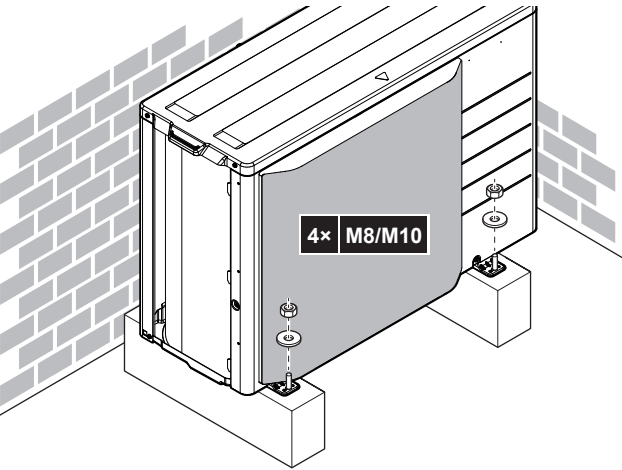

4.2.3 To provide drainage

NOTICE

If the unit is installed in a cold climate, take adequate measures so that the evacuated condensate CANNOT freeze.


NOTICE

If the drain holes of the outdoor unit are blocked up by a mounting base or floor surface, place additional foot bases ≤30 mm under the outdoor unit's feet.

INFORMATION

For information on the available options, contact your dealer.

- 1 Use a drain plug for drainage.
- 2 Use a Ø16 mm hose (field supply).

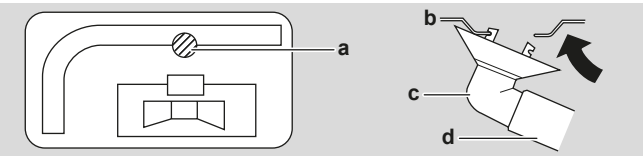


- a Drain port
- b Bottom frame
- c Drain plug
- d Hose (field supply)

To close the drain holes and attach the drain socket


NOTICE

In cold areas, do NOT use a drain socket, hose and caps (1, 2) with the outdoor unit. Take adequate measures so that the evacuated condensate CANNOT freeze.

- 1 Install drain caps 1 and 2 (accessory). Make sure the edges of the drain caps close off the holes completely.

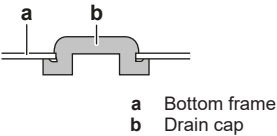

- 2 Install the drain socket.

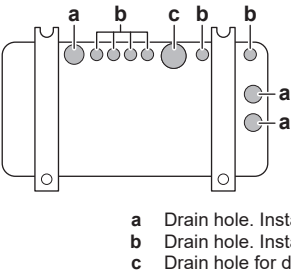

5 Piping installation

5.1 Preparing refrigerant piping

5.1.1 Refrigerant piping requirements

CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.

NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.

- Foreign materials inside pipes (including oils for fabrication) must be ≤30 mg/10 m.

Refrigerant piping diameter

Use the same diameters as the connections on the outdoor units:

Pipe outer diameter	
Liquid piping	Gas piping
Ø6.4 mm (1/4")	Ø12.7 mm (1/2")

Refrigerant piping material

- Piping material:** phosphoric acid deoxidised seamless copper
- Flare connections:** Only use annealed material.
- Piping temper grade and thickness:**

Outer diameter (Ø)	Temper grade	Thickness (t) ^(a)	
6.4 mm (1/4")	Annealed (O)	≥0.8 mm	
12.7 mm (1/2")			

^(a) Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

5.1.2 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
 - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
 - with a heat resistance of at least 120°C
- Insulation thickness:

Pipe outer diameter (Ø _p)	Insulation inner diameter (Ø _i)	Insulation thickness (t)
6.4 mm (1/4")	8~10 mm	≥10 mm
12.7 mm (1/2")	14~16 mm	≥10 mm



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

5.1.3 Refrigerant piping length and height difference

What?	Distance
Maximum allowable pipe length	30 m
Minimum allowable pipe length	1.5 m
Maximum allowable height difference	20 m

5.2 Connecting the refrigerant piping



DANGER: RISK OF BURNING/SCALDING



CAUTION

- No brazing or welding on site for units with R32 refrigerant charge during shipment.
- During installation of the refrigeration system, joining of parts with at least one part charged shall be performed taking into account the following requirements: inside occupied spaces non-permanent joints are NOT allowed for R32 refrigerant except for site made joints directly connecting the indoor unit to piping. Site made joints directly connecting piping to indoor units shall be of non-permanent type.

5.2.1 To connect the refrigerant piping to the outdoor unit

- Piping length.** Keep field piping as short as possible.
- Piping protection.** Protect the field piping against physical damage.



WARNING


Connect the refrigerant piping securely before running the compressor. If the refrigerant piping is NOT connected and the stop valve is open when the compressor is run, air will be sucked in. This will cause abnormal pressure in the refrigeration cycle, which may result in equipment damage and even injury.



NOTICE

- Use the flare nut fixed to the unit.
- To prevent gas leakage, apply refrigeration oil ONLY to the inside of the flare. Use refrigeration oil for R32 (FW68DA).
- Do NOT reuse joints.

- 1 Connect the liquid refrigerant connection from the indoor unit to the liquid stop valve of the outdoor unit.

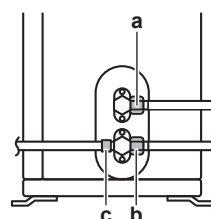

- a Liquid stop valve
- b Gas stop valve
- c Service port

- 2 Connect the gas refrigerant connection from the indoor unit to the gas stop valve of the outdoor unit.



NOTICE

It is recommended that the refrigerant piping between indoor and outdoor unit is installed in a ducting or the refrigerant piping is wrapped with finishing tape.

5.3 Checking the refrigerant piping

5.3.1 To check for leaks



NOTICE

Do NOT exceed the unit's maximum working pressure (see "PS High" on the unit name plate).



NOTICE

ALWAYS use a recommended bubble test solution from your wholesaler.

NEVER use soap water:

- Soap water may cause cracking of components, such as flare nuts or stop valve caps.
- Soap water may contain salt, which absorbs moisture that will freeze when the piping gets cold.
- Soap water contains ammonia which may lead to corrosion of flared joints (between the brass flare nut and the copper flare).

- 1 Charge the system with nitrogen gas up to a gauge pressure of at least 200 kPa (2 bar). It is recommended to pressurize to 3000 kPa (30 bar) in order to detect small leaks.
- 2 Check for leaks by applying the bubble test solution to all connections.
- 3 Discharge all nitrogen gas.

6 Charging refrigerant

5.3.2 To perform vacuum drying



DANGER: RISK OF EXPLOSION

Do NOT open the stop valves before the vacuum drying is finished.

1 Vacuum the system until the pressure on the manifold indicates -0.1 MPa (-1 bar).

2 Leave as is for 4-5 minutes and check the pressure:

If the pressure...	Then...
Does not change	There is no moisture in the system. This procedure is finished.
Increases	There is moisture in the system. Go to the next step.

3 Vacuum the system for at least 2 hours to a manifold pressure of -0.1 MPa (-1 bar).

4 After turning the pump OFF, check the pressure for at least 1 hour.

5 If you do NOT reach the target vacuum or CANNOT maintain the vacuum for 1 hour, do the following:

- Check for leaks again.
- Perform vacuum drying again.



NOTICE

Make sure to open the stop valves after installing the refrigerant piping and performing vacuum drying. Running the system with the stop valves closed may break the compressor.

6 Charging refrigerant

6.1 About the refrigerant

This product contains fluorinated greenhouse gases. Do NOT vent gases into the atmosphere.

Refrigerant type: R32

Global warming potential (GWP) value: 675

Periodical inspections for refrigerant leaks may be required depending on the applicable legislation. Contact your installer for more information.



A2L

WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



WARNING

- The refrigerant inside the unit is mildly flammable, but normally does NOT leak. If the refrigerant leaks in the room and comes in contact with fire from a burner, a heater, or a cooker, this may result in fire, or the formation of a harmful gas.
- Turn OFF any combustible heating devices, ventilate the room, and contact the dealer where you purchased the unit.
- Do NOT use the unit until a service person confirms that the part from which the refrigerant leaked has been repaired.



WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.



WARNING

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



WARNING

NEVER directly touch any accidental leaking refrigerant. This could result in severe wounds caused by frostbite.

6.2 To determine the additional refrigerant amount

If the total liquid piping length is...	Then...
≤ 10 m	Do NOT add additional refrigerant.
> 10 m	$R = (\text{total length (m) of liquid piping} - 10 \text{ m}) \times 0.020$ $R = \text{Additional charge (kg) (rounded in units of 0.01 kg)}$



INFORMATION

Piping length is the one-way length of liquid piping.

6.3 To determine the complete recharge amount



INFORMATION

If a complete recharge is necessary, the total refrigerant charge is: the factory refrigerant charge (see unit name plate) + the determined additional amount.

6.4 To charge additional refrigerant



WARNING

- Only use R32 as refrigerant. Other substances may cause explosions and accidents.
- R32 contains fluorinated greenhouse gases. Its global warming potential (GWP) value is 675. Do NOT vent these gases into the atmosphere.
- When charging refrigerant, ALWAYS use protective gloves and safety glasses.

Prerequisite: Before charging refrigerant, make sure the refrigerant piping is connected and checked (leak test and vacuum drying).

- 1 Connect the refrigerant cylinder to the service port.
- 2 Charge the additional refrigerant amount.
- 3 Open the gas stop valve.

6.5 To check refrigerant piping joints for leaks after charging refrigerant

- 1 Perform the leak tests see ["5.3 Checking the refrigerant piping"](#) [p. 9].

- 2 Charge refrigerant.
- 3 Check for refrigerant leaks after charging (see below)

Tightness test of field-made refrigerant joints indoors

- 1 Use a leakage test method with a minimum sensitivity of 5 g of refrigerant/year. Test leaks using a pressure of at least 0.25 times the maximum working pressure (see "PS High" on the unit nameplate).

If a leak is detected

- 1 Recover the refrigerant, repair the joint, and repeat the test.

6.6 To fix the fluorinated greenhouse gases label

- 1 Fill in the label as follows:

Contains fluorinated greenhouse gases

RXXX

GWP: XXX

f

1 = kg

2 = kg

1 + 2 = kg

GWP × kg
1000 = tCO₂eq

a

b

c

d

e

- a If a multilingual fluorinated greenhouse gases label is delivered with the unit (see accessories), peel off the applicable language and stick it on top of a.
- b Factory refrigerant charge: see unit name plate
- c Additional refrigerant amount charged
- d Total refrigerant charge
- e **Quantity of fluorinated greenhouse gases** of the total refrigerant charge expressed as tonnes CO₂ equivalent.
- f GWP = Global Warming Potential



NOTICE

Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000

Use the GWP value mentioned on the refrigerant charge label.

- 2 Fix the label on the inside of the outdoor unit near the gas and liquid stop valves.

7 Electrical installation



DANGER: RISK OF ELECTROCUTION



WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



WARNING

ALWAYS use multicore cable for power supply cables.



WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING

Do **NOT** connect the power supply to the indoor unit. This could result in electrical shock or fire.



WARNING

- Do **NOT** use locally purchased electrical parts inside the product.
- Do **NOT** branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.



DANGER: RISK OF ELECTROCUTION

All electrical parts (including thermistors) are powered by the power supply. Do **NOT** touch them with bare hands.

7.1 Specifications of standard wiring components



NOTICE

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal. Details are described in "Guidelines when connecting the electrical wiring" in the installer reference guide.


Power supply	
Voltage	220~240 V
Frequency	50 Hz
Phase	1~
Current	RXF 50: 11.6 A
Components	
Power supply cable	MUST comply with national wiring regulation 3-core cable Wire size based on the current, but not less than 2.5 mm ²
Interconnection cable (indoor↔outdoor)	220~240 V Only use harmonised wire providing double insulation and suitable for applicable voltage 4-core cable Minimum size 1.5 mm ²
Recommended circuit breaker	RXF 50: 13 A
Earth leakage circuit breaker / residual current circuit breaker	MUST comply with national wiring regulation

7.2 To connect the electrical wiring to the outdoor unit


- 1 Remove the service cover.

8 Finishing the outdoor unit installation

- Open the wire clamp.
- Connect the interconnection cable and power supply as follows:

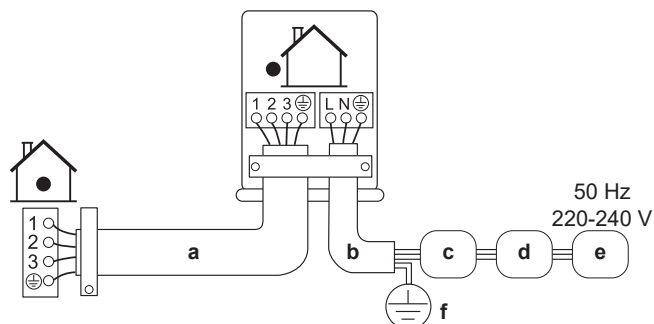

- a Interconnection cable
- b Power supply cable
- c Circuit breaker (field provided fuse with rating according to the model name plate)
- d Residual current device
- e Power supply
- f Earth

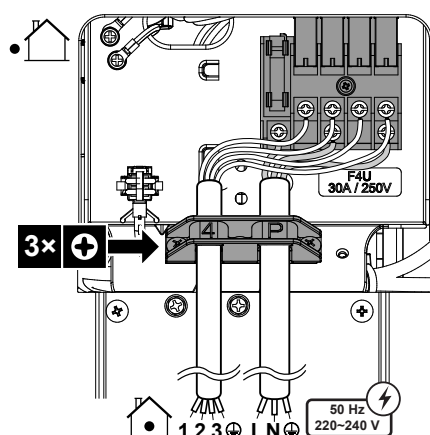

- Tighten the terminal screws securely. We recommend using a Phillips screwdriver.

8 Finishing the outdoor unit installation


8.1 To finish the outdoor unit installation



DANGER: RISK OF ELECTROCUTION

- Make sure that the system is earthed properly.
- Turn OFF the power supply before servicing.
- Install the switch box cover before turning ON the power supply.

- Insulate and fix the refrigerant piping and cables as follows:

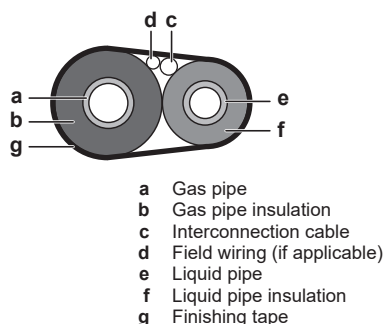

- a Gas pipe
- b Gas pipe insulation
- c Interconnection cable
- d Field wiring (if applicable)
- e Liquid pipe
- f Liquid pipe insulation
- g Finishing tape

- For RXM class 20, 25, 35, 50 and ARXM units in combination with FTXM, ATXM, or FVXM units, make sure to activate the "Standby Electricity Saving" function. Refer to the Installer reference guide of the outdoor unit for the setting procedure.
- Install the service cover.

9 Commissioning



NOTICE

General commissioning checklist. Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during commissioning and hand-over to the user.



NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.

9.1 Checklist before commissioning

- After the installation of the unit, check the items listed below.
- Close the unit.
- Power up the unit.

☐	The indoor unit is properly mounted.
☐	The outdoor unit is properly mounted.
☐	The system is properly earthed and the earth terminals are tightened.
☐	The power supply voltage matches the voltage on the identification label of the unit.
☐	There are NO loose connections or damaged electrical components in the switch box.
☐	There are NO damaged components or squeezed pipes on the inside of the indoor and outdoor units.
☐	There are NO refrigerant leaks .
☐	The refrigerant pipes (gas and liquid) are thermally insulated.
☐	The correct pipe size is installed and the pipes are properly insulated.
☐	The stop valves (gas and liquid) on the outdoor unit are fully open.
☐	Drainage Make sure drainage flows smoothly. Possible consequence: Condensate water might drip.
☐	The indoor unit receives the signals of the user interface .
☐	The specified wires are used for the interconnection cable .
☐	The fuses, circuit breakers , or locally installed protection devices are installed according to this document, and have NOT been bypassed.
☐	Make sure that the Standby Electricity Saving function is activated for the units.

9.2 Checklist during commissioning

☐	To perform an air purge .
☐	To perform a test run .

9.3 To perform a test run

INFORMATION

If the unit runs into an error during commissioning, see the service manual for the detailed troubleshooting guidelines.

Prerequisite: The power supply **MUST** be in the specified range.

Prerequisite: Test run may be performed in cooling or heating mode.

Prerequisite: Refer to the operation manual of the indoor unit for setting temperature, operation mode....

- In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. The test run can be disabled if necessary.
- When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.
- Make sure that all functions and parts are working properly.
- The system stops operating 3 minutes after the unit is turned OFF.

INFORMATION

- Even if the unit is turned OFF, it consumes electricity.
- When the power turns back on after a power break, the previously selected mode will be resumed.

10 Maintenance and service

NOTICE

General maintenance/inspection checklist. Next to the maintenance instructions in this chapter, a general maintenance/inspection checklist is also available on the Daikin Business Portal (authentication required).

The general maintenance/inspection checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during maintenance.

NOTICE

Maintenance **MUST** be done by an authorised installer or service agent.

We recommend performing maintenance at least once a year. However, applicable legislation might require shorter maintenance intervals.

NOTICE


Applicable legislation on **fluorinated greenhouse gases** requires that the refrigerant charge of the unit is indicated both in weight and CO₂ equivalent.

Formula to calculate the quantity in CO₂ equivalent tonnes: GWP value of the refrigerant × total refrigerant charge [in kg] / 1000



DANGER: RISK OF ELECTROCUTION

Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.

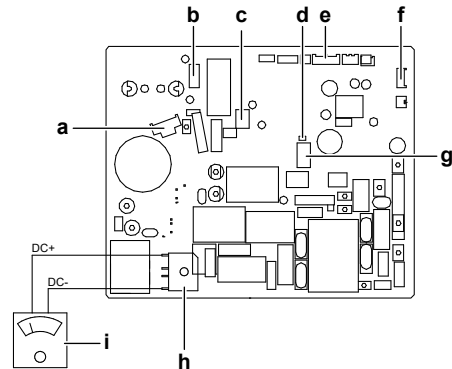

- a X30A – compressor lead wire
- b X70A – fan motor lead wire
- c X80A – reversing solenoid valve lead wire
- d LED
- e X90A – thermistor lead wire
- f X21A – electronic expansion valve lead wire
- g X40A – thermal overload relay lead wire
- h DB1 - diode bridge
- i Multimeter (DC voltage range)

Following symbols may occur on the unit:

Symbol	Explanation
	Measure the voltage at the terminals of main circuit capacitors or electrical components before servicing.

11 Troubleshooting

11.1 Fault diagnosis using LED on outdoor unit PCB

LED is...	Diagnosis
flashing	Normal → check the indoor unit.
ON	Turn the power OFF and back ON, and check the LED within approximately 3 minutes. → If the LED is ON again, the outdoor unit PCB is faulty.
OFF	- Supply voltage (for power saving). - Power supply fault. - Turn the power OFF and back ON, and check the LED within approximately 3 minutes. → If the LED is OFF again, the outdoor unit PCB is faulty.



NOTICE

For error code diagnosis use the wireless remote control delivered with the indoor unit. See the service manual for the complete list of error codes and a detailed troubleshooting guideline for each error.



DANGER: RISK OF ELECTROCUTION

- When the unit is **NOT** operating, the LEDs on the PCB are turned OFF in order to save power.
- Even when the LEDs are OFF, the terminal block and the PCB may be powered.

12 Disposal



NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.



INFORMATION

To protect the environment, make sure to perform an automatic pump down operation when relocating or dismantling the unit. For the pump down procedure, refer to the service manual or the installer reference guide.

13 Technical data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

13.1 Wiring diagram

The wiring diagram is delivered with the unit, located inside of the outdoor unit (bottom side of the top plate).

13.1.1 Unified wiring diagram legend

For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by "*" in the part code.

Symbol	Meaning	Symbol	Meaning
	Circuit breaker		Protective earth
			Noiseless earth
	Connection		Protective earth (screw)
	Connector		Rectifier
	Earth		Relay connector
	Field wiring		Short-circuit connector
	Fuse		Terminal
	Indoor unit		Terminal strip
	Outdoor unit		Wire clamp
	Residual current device		Heater

Symbol	Colour	Symbol	Colour
BLK	Black	ORG	Orange
BLU	Blue	PNK	Pink
BRN	Brown	PRP, PPL	Purple
GRN	Green	RED	Red
GRY	Grey	WHT	White
SKY BLU	Sky blue	YLW	Yellow

Symbol	Meaning
A*P	Printed circuit board
BS*	Pushbutton ON/OFF, operation switch
BZ, H*O	Buzzer
C*	Capacitor
AC*, CN*, E*, HA*, HE*, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_*, NE	Connection, connector
D*, V*D	Diode
DB*	Diode bridge
DS*	DIP switch
E*H	Heater
FU*, F*U, (for characteristics, refer to PCB inside your unit)	Fuse
FG*	Connector (frame ground)
H*	Harness
H*P, LED*, V*L	Pilot lamp, light emitting diode
HAP	Light emitting diode (service monitor green)
HIGH VOLTAGE	High voltage
IES	Intelligent eye sensor
IPM*	Intelligent power module
K*R, KCR, KFR, KHuR, K*M	Magnetic relay
L	Live
L*	Coil
L*R	Reactor
M*C	Compressor motor
M*F	Fan motor
M*P	Drain pump motor
MR*, MRCW*, MRM*, MRN*	Magnetic relay
N	Neutral
n=*, N=*	Number of passes through ferrite core
PAM	Pulse-amplitude modulation
PCB*	Printed circuit board
PM*	Power module
PS	Switching power supply
PTC*	PTC thermistor
Q*	Insulated gate bipolar transistor (IGBT)
Q*C	Circuit breaker
Q*DI, KLM	Earth leak circuit breaker
Q*L	Overload protector
Q*M	Thermo switch
Q*R	Residual current device
R*	Resistor
R*T	Thermistor
RC	Receiver
S*C	Limit switch
S*L	Float switch
S*NG	Refrigerant leak detector
S*NPH	Pressure sensor (high)
S*NPL	Pressure sensor (low)
S*PH, HPS*	Pressure switch (high)
S*PL	Pressure switch (low)

Symbol	Meaning
S*T	Thermostat
S*RH	Humidity sensor
S*W, SW*	Operation switch
SA*, F1S	Surge arrester
SR*, WLU	Signal receiver
SS*	Selector switch
SHEET METAL	Terminal strip fixed plate
T*R	Transformer
TC, TRC	Transmitter
V*, R*V	Varistor
V*R	Diode bridge, Insulated-gate bipolar transistor (IGBT) power module
WRC	Wireless remote controller
X*	Terminal
X*M	Terminal strip (block)
Y*E	Electronic expansion valve coil
Y*R, Y*S	Reversing solenoid valve coil
Z*C	Ferrite core
ZF, Z*F	Noise filter


13.2 Piping diagram

13.2.1 Piping diagram: Outdoor unit

PED categories of equipment:

- High pressure switch: category IV;
- Compressor: category II;
- Other equipment: art. 4§3.

RXF50F, ARXF50F


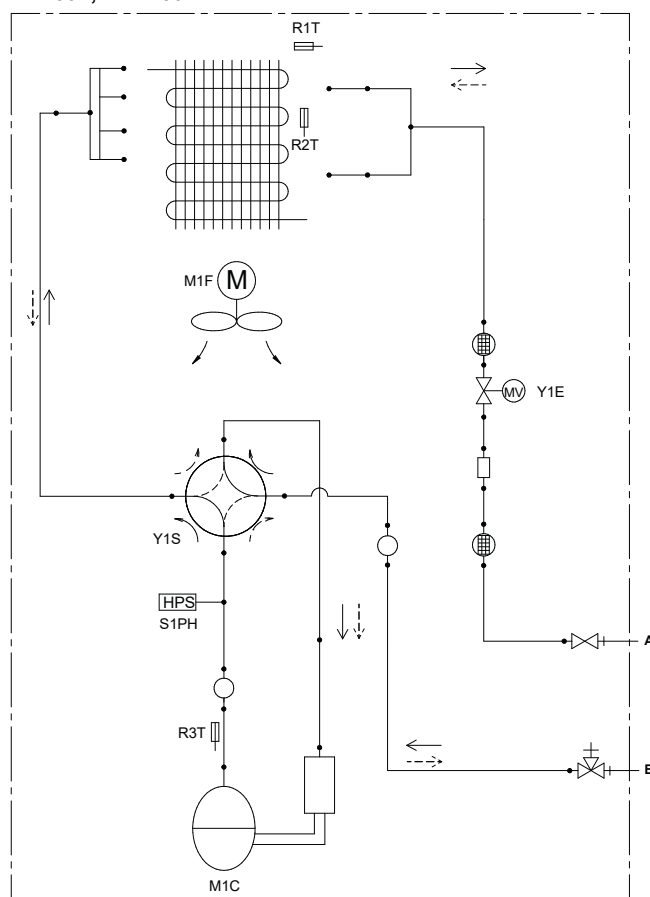




Piping diagram legend



	Liquid stop valve
	Gas stop valve
	Refnet
	Muffler
	Muffler with filter
	Electronic expansion valve
	Filter
	Propeller fan
	High pressure switch (automatic reset)
	Thermistor
	Capillary tube
	4-way valve
	Accumulator
	Liquid receiver
	Compressor
	Heat exchanger
	Distributor

13 Technical data

Piping diagram legend	
	Refrigerant flow: Cooling
	Refrigerant flow: Heating
A	Field piping liquid 6.4 CuT
B	Field piping gas 9.5 CuT

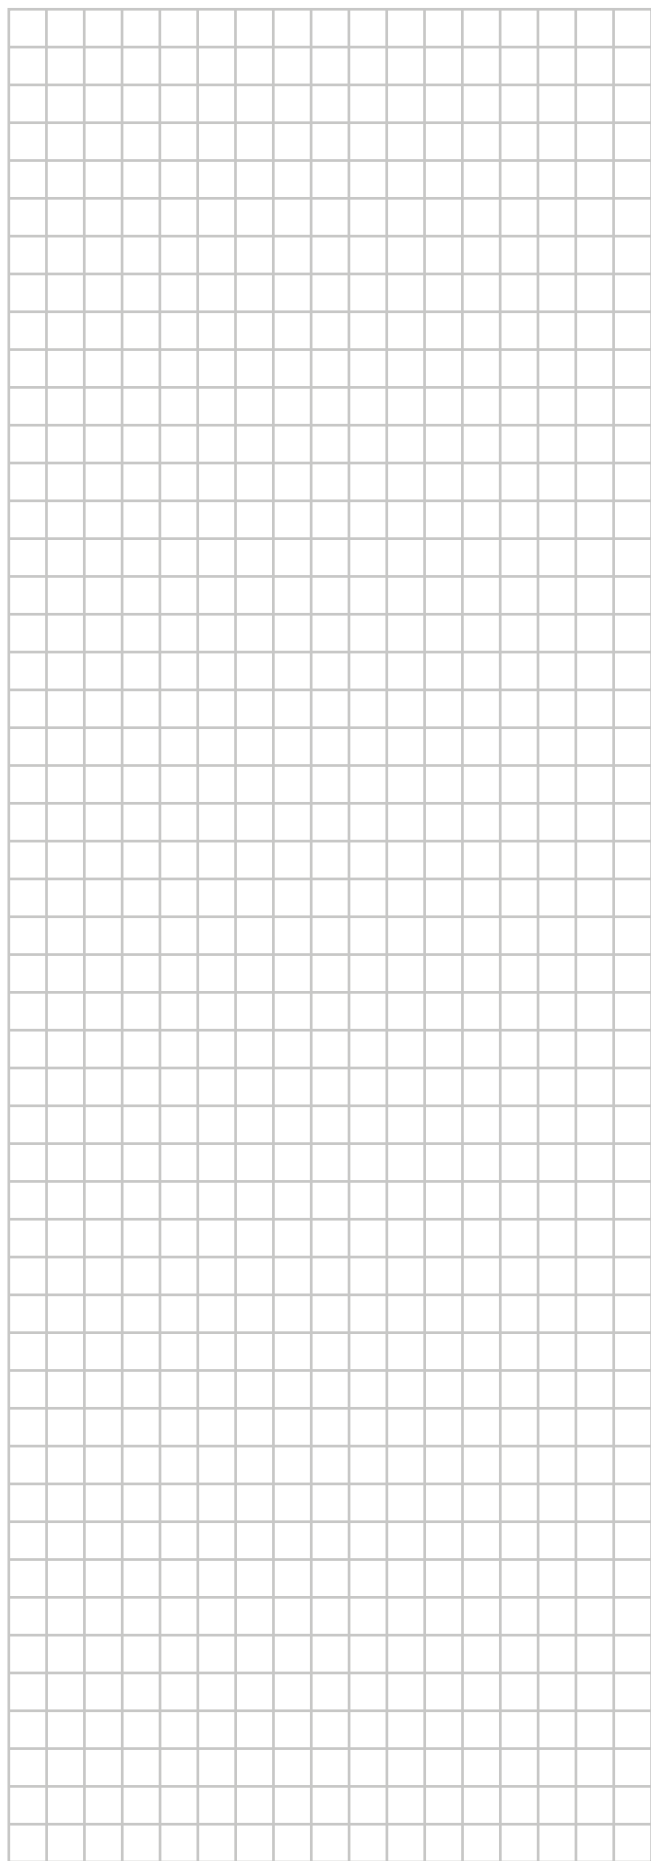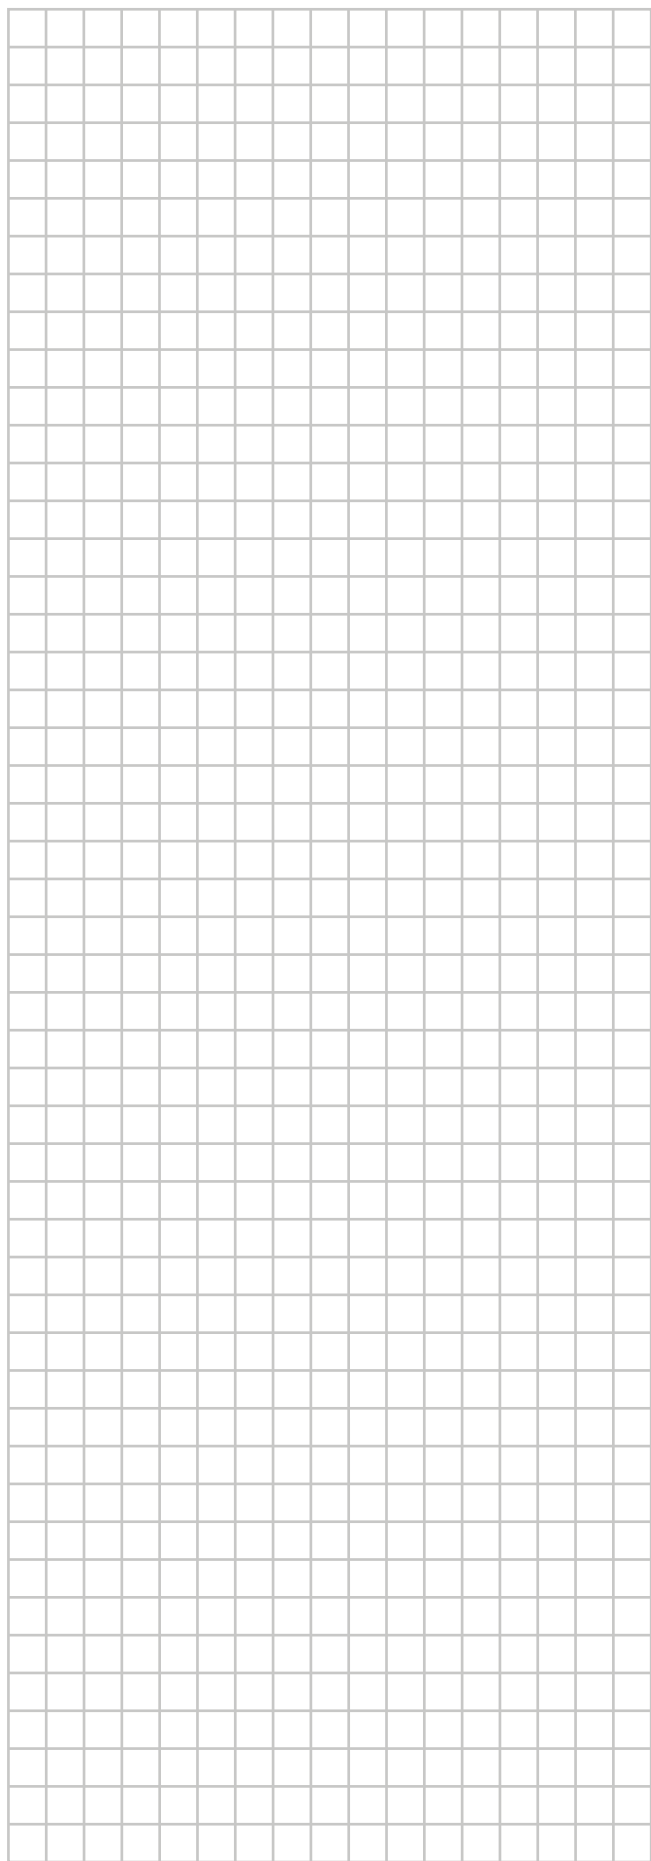

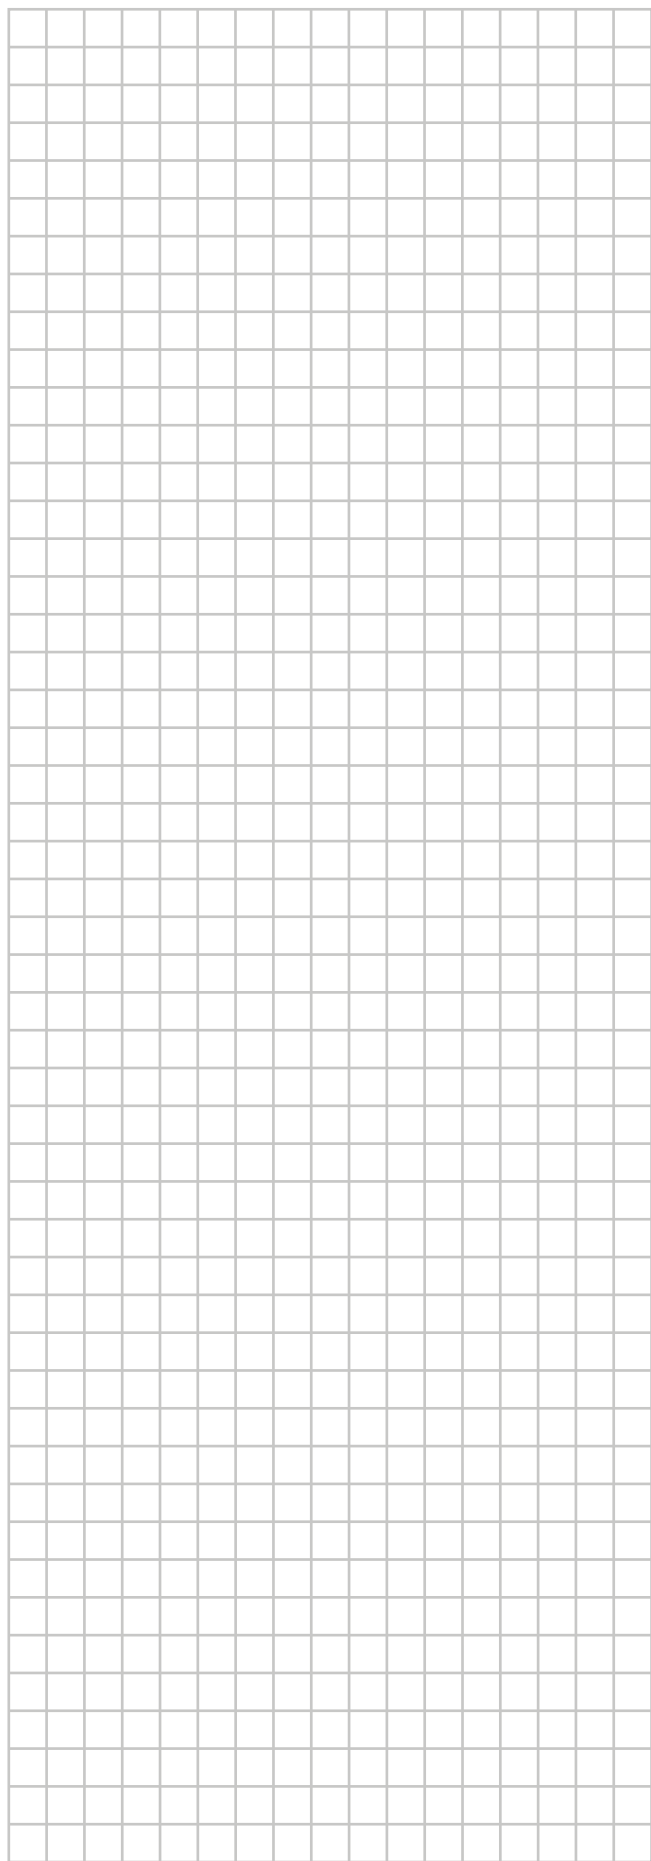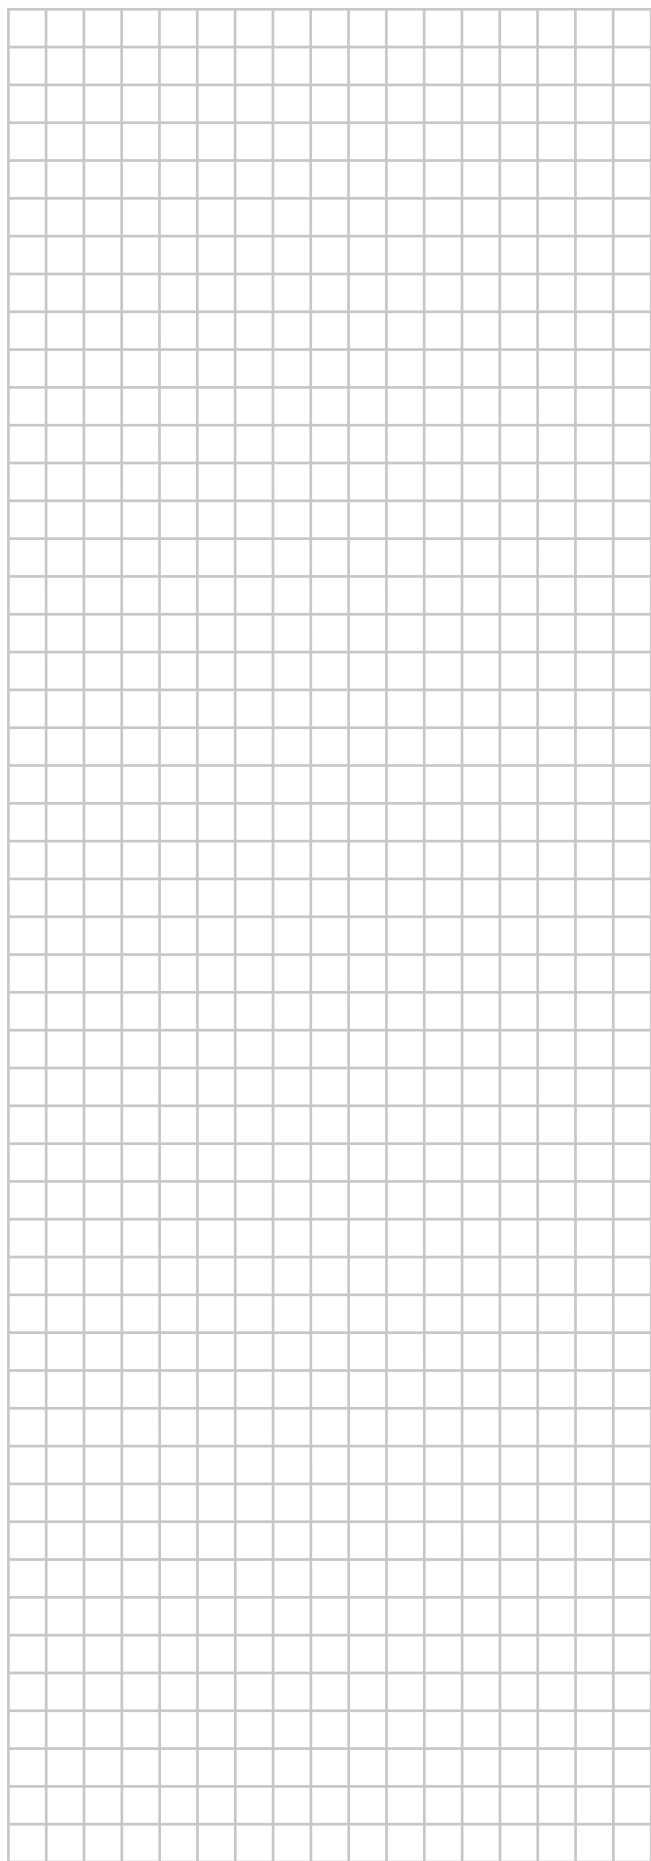

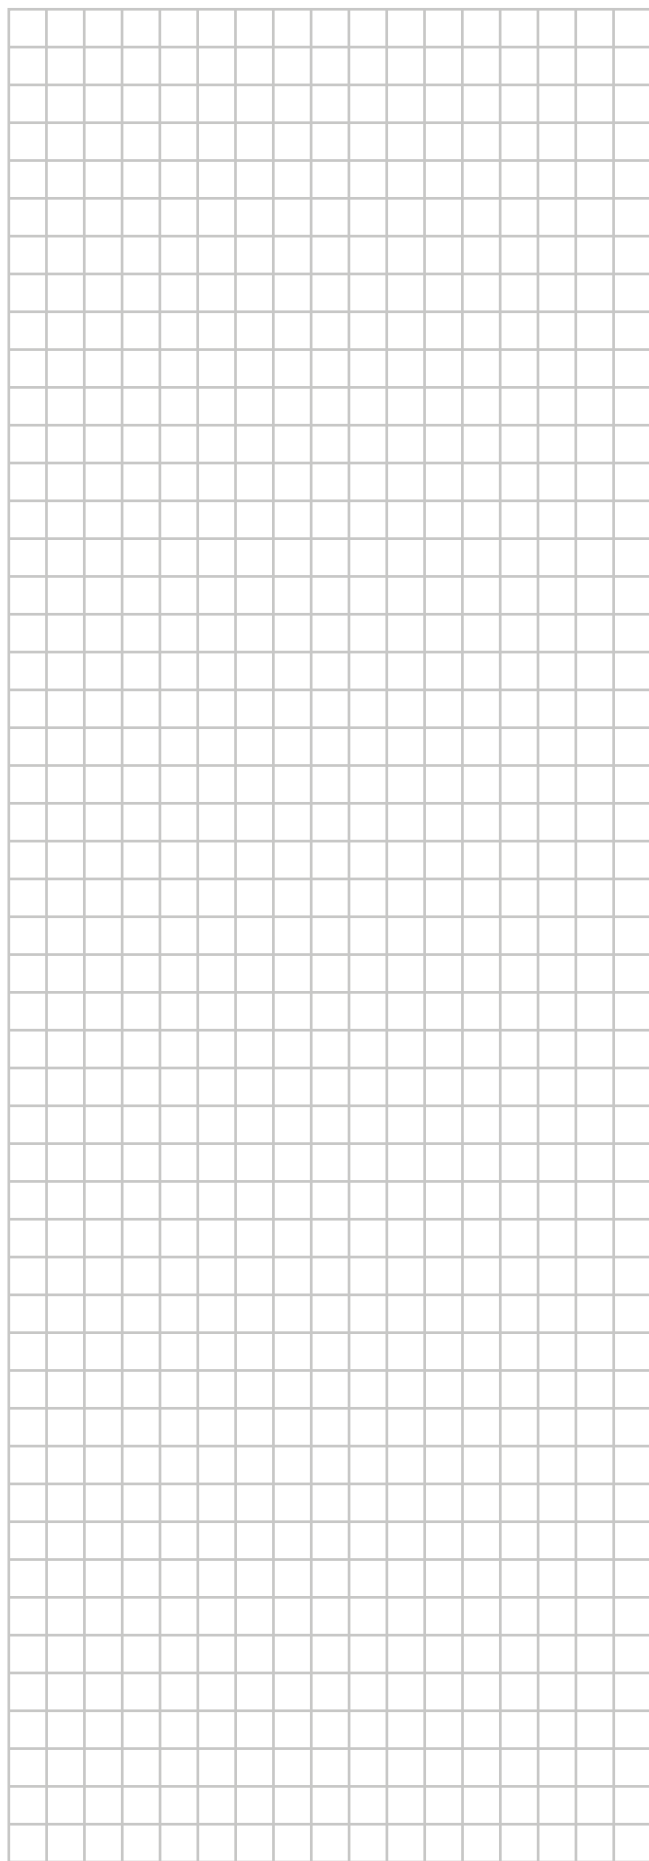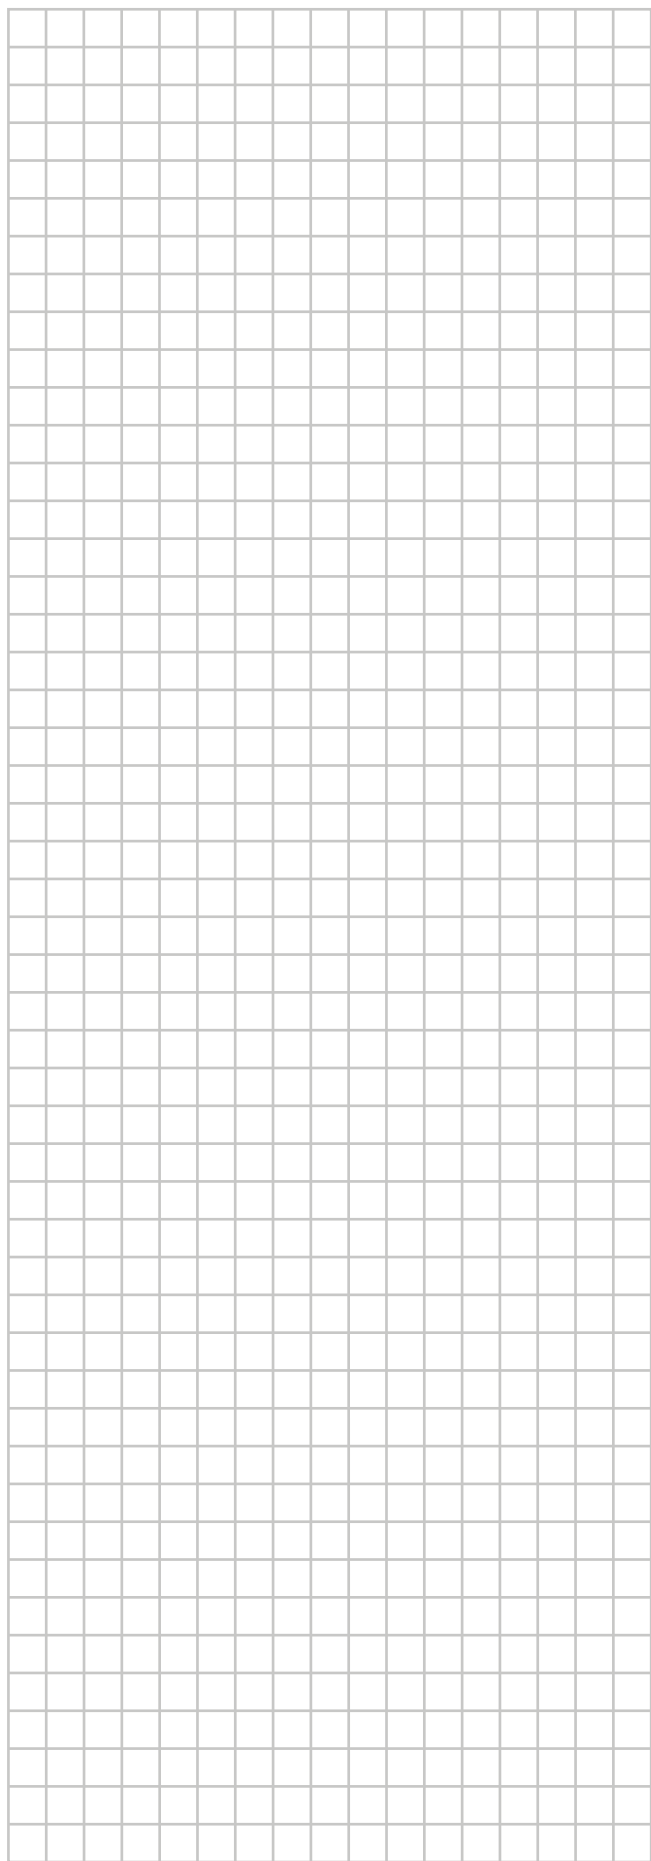

**DAIKIN ISITMA VE SOĞUTMA SİSTEMLERİ SAN.TİC. A.Ş.**

Gülsuyu Mahallesi, Fevzi Çakmak Caddesi, Burçak Sokak, No:20, 34848 Maltepe

İSTANBUL / TÜRKİYE

Tel: 0216 453 27 00

Faks: 0216 671 06 00

Çağrı Merkezi: 444 999 0

Web: www.daikin.com.tr

Copyright 2024 Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

3P748643-18H 2024.07